











筒車規格件表 / CONVERSION CHART

P1

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
C007J-W121 C858J /CH	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	MH41	MT01	YXX128GAS #10
C007J-U121 C858J /CH	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	—	MT01	YXX128GAS #10
C007J-W121 C858J /CH/UTP(UTR)	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	MH41	MT01	YXX128GAS #10
C007J-U121 C858J /CH/UTQ(UTS)	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	—	MT01	YXX128GAS #10
C007J-W122 C858J /CH	240 248 256 356 364	M5240 M5248 M5356 M5356 M5364	E3524P E3525P E3826S E3826P E3827P	D4206 D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2446-A P2447-A	MH41	MT01	YXX128GAS #10
C007J-U122 C858J /CH	240 248 256 356 364	M5240 M5248 M5356 M5356 M5364	E3524P E3525P E3826S E3826P E3827P	D4206 D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2446-A P2447-A	—	MT01	YXX128GAS #10
C007J-W122 C858J /CH/UTP(UTR)	240 248 256 356 364	M5240 M5248 M5356 M5356 M5364	E3524P E3525P E3826S E3826P E3827P	D4206 D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2446-A P2447-A	MH41	MT01	YXX128GAS #10

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替 P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替 P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車規格件表 / CONVERSION CHART











P2

機型 MODEL	規格 SUB-CLASS	針座 NEEDLE CLAMP	針板 NEEDLE PLATE	主送具 MAIN FEED DOG	差送具 DIFF. FEED DOG	押具 PRESSER FOOT	上叉 SPREADER	勾針 LOOPER	針號 NEEDLE
C007J-U122 C858J /CH/UTQ(UTS)	240	M5240	E3524P	D4206	H4458	P2544-A	—	MT01	UYX128GAS #10
	248	M5248	E3525P	D4206	H4458	P2545-A			
	256	M5356	E3826S	D4206	H4458	P2446-A			
C007J-W122 C858J /CHA	356	M5364	E3826P	D4206	H4459	P2447-A	—	MT01	UYX128GAS #10
	356	M5356	E3826Q	D4206	H4458	P0216-A			
	356	M5364	E3827P	D4207	H4459	P2447-A			
C007J-U122 C858J /CHA	356	M5356	E3826Q	D4206	H4458	P0416-A	—	MT01	UYX128GAS #10
	240	M5240	E3534P	D4206	H4458	P2544-A			
	248	M5248	E3535P	D4206	H4458	P2545-A			
C007J-W123 C858J /CH	356	M5356	E3836P	D4206	H4458	P2446-A	MH41	MT01	UYX128GAS #10
	364	M5364	E3837P	D4207	H4459	P2447-A			
	240	M5240	E3534P	D4206	H4458	P2544-A			
C007J-U123 C858J /CH	248	M5248	E3535P	D4206	H4458	P2545-A	—	MT01	UYX128GAS #10
	356	M5356	E3836P	D4206	H4458	P2446-A			
	364	M5364	E3837P	D4207	H4459	P2447-A			
C007J-W132 C858J /CHE	240	M5240	E2324P	D2109	H2219	P2904-A	MH41	MT01	UYX128GAS #10
	248	M5248	E2325P	D2109	H2219	P2905-A			
	356	M5356	E2326P	D2110	H2220	P2906-A			
C007J-W132 C858J /CHE/UTP(UTR)	364	M5364	E2327P	D2110	H2220	P2907-A	MH41	MT01	UYX128GAS #10
	356	M5356	E2326P	D2110	H2220	P2906-A			
	364	M5364	E2327P	D2110	H2220	P2907-A			

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
 P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
 P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A
 P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車規格件表 / CONVERSION CHART

P3

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
C007J-W152 C858J /CZ/UTP/RLQ	356 364	M5356 M5364	E4326P E4327P	D3216 D3217	H3262 H3263	P2416-A P2417-A	MH41	MT01	UYX128GAS #10
C007J-U152 C858J /CZ/UTQ/RLQ	356 364	M5356 M5364	E4326P E4327P	D3216 D3217	H3262 H3263	P2416-A P2417-A	MH41	MT01	UYX128GAS #10
C007J-U152 C858J /CZ/CLA/UTP/RLQ	356 364	M5356 M5364	E4326P E4327P	D3216 D3217	H3262 H3263	P2416-A P2417-A	—	MT01	UYX128GAS #10
C007J-U152 C858J /CZ/CLA/UTQ/RLQ	356 364	M5356 M5364	E4326P E4327P	D3216 D3217	H3262 H3263	P2416-A P2417-A	—	MT01	UYX128GAS #10
C007J-W162 C858J	240 248 356 364	M5240 M5248 M5356 M5364	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	— MH41	MT01A	TVX5 #14~16
C007J-U162 C858J /UTP (UTR)	240 248 356 364	M5240 M5248 M5356 M5364	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	— MH41	MT01A	TVX5 #14~16
C007J-U162 C858J /UTQ (UTS)	240 248 356 364	M5240 M5248 M5356 M5364	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	—	MT01A	TVX5 #14~16

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替 P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替 P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

09/12/11

簡單規格件表 / CONVERSION CHART

P4

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
C007J-W222 C858J /CC	240	M5240	E4124P	D3216	H3362	P1814-A	MH41	MT01	UYX128GAS #10
	248	M5248	E4125P	D3216	H3362	P1815-A			
C007J-U222 C858J /CC	356	M5356	E4426P	D3216	H3362	P2116-A	—	MT01	UYX128GAS #10
	364	M5364	E4427P	D3217	H3363	P2117-A			
C007J-W222 C858J /CQA/CLA	256	M5356	E2326Q	D2110	H2220Q	P2906Q-A	MH41	MT01A	TVX5 #14
C007J-W322 C858J /CC	356	M5356	E2826P	D2107L	H3259M	P2456-A	MH41	MT01	UYX128GAS #10
	364	M5364	E2827P	D2107L	H3259M	P2457-A			
C007J-U322 C858J /CC	356	M5356	E2826P	D2107L	H3259M	P2456-A	—	MT01	UYX128GAS #10
	364	M5364	E2827P	D2107L	H3259M	P2457-A			
C007J-W322 C858J /CC/UTR(UTR)	356	M5356	E2826P	D2107L	H3259M	P2456-A	MH41	MT01	UYX128GAS #10
	364	M5364	E2827P	D2107L	H3259M	P2457-A			
C007J-U322 C858J /CC/UTQ(UTS)	356	M5356	E2826P	D2107L	H3259M	P2456-A	—	MT01	UYX128GAS #10
	364	M5364	E2827P	D2107L	H3259M	P2457-A			

註(1) : P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
 P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

09/12/11

註(2) : C007J-W/U322A-356 /CC 時, 該針板與送具改用 C007J-W/U122-364 之針板與送具, 加附CHJ-A
 C858J
 When W/U322A-364 /CC, The needle plate and the feed dog have to be replaced by C007J-W/U122-364 needle plate and the feed dog, with CHJ-A attached.

註(2) : C007J-W/U322A-356 /CC 時, 該針板與送具改用 C007J-W/U122-364 之針板與送具, 加附CHJ-A
 C858J
 When W/U322A-364 /CC, The needle plate and the feed dog have to be replaced by C007J-W/U122-364 needle plate and the feed dog, with CHJ-A attached.

筒車規格件表 / CONVERSION CHART

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	上 叉	勾 針	針 號
C007J-W322 C858J /CE	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	MH41	MT01	UYX128GAS #10
C007J-U322 C858J /CE	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	—	MT01	UYX128GAS #10
C007J-W322 C858J CE/UTP(UTR)	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	MH41	MT01	UYX128GAS #10
C007J-U322 C858J CE/UTQ(UTS)	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	—	MT01	UYX128GAS #10

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車規格件表 / CONVERSION CHART

機 型	規 格	針 座	針 板	主送具	差送具	押 具	上 叉	勾 針	針 號
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
C007J -W512 C858J /FE(FFC)	232 240 356 364	M5232 M5240 M5356 M5364	E3523R E3524R E3826R E3827R	D4205 D4206 D4206 D4207	H4457 H4458 H4458 H4459	P2913-A P2914-A P3216-A P3217-A	MH41	MT01	UYX128GAS #10
C007J -U512 C858J /FE(FFC)	240 356 364	M5240 M5356 M5364	E3524R E3826R E3827R	D4206 D4206 D4207	H4458 H4458 H4459	P3414-A P3716-A P3717-A	—	MT01	UYX128GAS #10
C007J -W522 C858J /FE(FFC)/CR/CL	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	MH41	MT01	UYX128GAS #10
C007J -U522 C858J /FE(FFC)/CR/CL	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	—	MT01	UYX128GAS #10
C007J -W532/ C858J /CR/UTP/CL/RLP/CX	232 356 364	M5232 M5356 M5364	E6423R E6426R E6427R	D3219 D3222	H3265 H3268	P3813R-A P3816R-A P3817R-A	MH41	MT01	UYX128GAS #10
C007J -U532/ C858J /CR/UTQ/CL/RLP/CX	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	MH41	MT01	UYX128GAS #10
C007J -W922/ C858J CW	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SMX1014B#10 (M11014B#70,S17256)
C007J -W922/ C858J CW/UTP	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SMX1014B#10 (M11014B#70,S17256)
C007J -W922/ C858J CW/UTR	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SMX1014B#10 (M11014B#70,S17256)

筒車規格件表 / CONVERSION CHART

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	上 叉	勾 針	針 號
C007J-W811 C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0215R E0216R E0217R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TXX5 #14
C007J-W811A C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0215Q E0216Q E0217Q	D2101Q	H2203Q	P2765-A P2766-A P0967-A	—	MT01	TXX5 #14
C007J-W811 C858J CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0215R E0216R E0217R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TXX5 #14
C007J-W811A C858J CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0215Q E0216Q E0217Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	TXX5 #14
C007J-U811 C858J CRL/UTQ/RL	248 356 364	M5248 M5356 M5364	E0215R E0216R E0217R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TXX5 #14
C007J-U811A C858J CRL/UTQ/RL	248 356 364	M5248 M5356 M5364	E0215Q E0216Q E0217Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	—	MT01	TXX5 #14
C007J-W812 C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0223R E0225R E0226R	D2101Q	H2203R	P2763-A P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W812A C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-U812 C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J-U812A C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10

註：C007J-W812A/W813A機型之針板與差送具為5排齒。

The needle plate and the differential feed dog of W812A/W813A model are five teeth.

C007J-W812/W813 機型之針板與差送具為4排齒。

The needle plate and the differential feed dog of W812/W813 model are four teeth.

筒車規格件表 / CONVERSION CHART

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
C007J-W812 C858J /CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W812A C858J /CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W812 C858J /CRL/UTQ/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J-W812A C858J /CRL/UTQ/RL	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J-W812 C858J /CRL/UTR	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W812A C858J /CRL/UTR	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W812 C858J /CRL/UTS	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	MH41	MT01	UYX128GAS #10
C007J-W812A C858J /CRL/UTS	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	MH41	MT01	UYX128GAS #10
C007J-W813 C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W813A C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W813 C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J-W813A C858J /CRL/RL	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10











註：C007J-W812A/W813A機型之針板與差送具為5排齒。
C858J

The needle plate and the differential feed dog of W812A/W813A model are five teeth.

C007J-W812/W813 機型之針板與差送具為4排齒。

The needle plate and the differential feed dog of W812/W813 model are four teeth.











筒車規格件表 / CONVERSION CHART

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
C007J-W813 C858J /CRL/UTR	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14
C007J-W813A C858J /CRL/UTR	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14
C007J-U813 C858J /CRL/UTS	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	MH41	MT01	TVX5 #14
C007J-U813A C858J /CRL/UTS	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	MH41	MT01	TVX5 #14
C007J-W822 C858J /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W823 C858J /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14
C007J-U822 C858J /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J-U823 C858J /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TVX5 #14
C007J-W822 C858J /CRL/CY/UTP/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYX128GAS #10
C007J-W823 C858J /CRL/CY/UTP/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14

註：C007J-W812A/W813A機型之針板與差送具為5排齒。
C858J

The needle plate and the differential feed dog of W812A/W813A model are five teeth.
The needle plate and the differential feed dog of W812/W813 model are four teeth.

筒車規格件表 / CONVERSION CHART

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號
MODEL 	SUB-CLASS 	NEEDLE CLAMP 	NEEDLE PLATE 	MAIN FEED DOG 	DIFF. FEED DOG 	PRESSER FOOT 	SPREADER 	LOOPER 	NEEDLE 
C007J_U822 C858J_U822 CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J_U823 C858J_U823 CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TYX5 #14
C007J_U822 C858J_U822 CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10
C007J_U823 C858J_U823 CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TYX5 #14












筒車規格件表 / CONVERSION CHART

P11

機型 MODEL	規格 SUB-CLASS	針座 NEEDLE CLAMP	針板 NEEDLE PLATE	主送具 MAIN FEED DOG	差送具 DIFF. FEED DOG	押具 PRESSER FOOT	上叉 SPREADER	勾針 LOOPER	偏心凸輪 CAM	針號 NEEDLE
C007J-W522 C858J /FE(FFC)/CRA/CL	356 364	M5356 M5364	E 6426P E 6427P	D 3222	H 3268	P3116 P3117	MH41E	MT01	MF01-A	UYX128GAS #11
C007J-U522 C858J /FE(FFC)/CRB/CL	356 364	M5356 M5364	E 6426P E 6427P	D 3222	H 3268	P3116 P3117	MH41E	MT01	MF01-A	UYX128GAS #11
C007J-U532/ C858J GRA/UTQ/CL/RLP/CX-A	356 364	M5356 M5364	E 6426P E 6427P	D 3222	H 3268	P3816Q P3817Q	—	MT01	MF01-A	UYX128GAS #11
C007J-U532/ C858J GRA/UTP/CL/RLP/CX-B	356 364	M5356 M5364	E 6426P E 6427P	D 3222	H 3268	P3816Q P3817Q	MH41E	MT01	MF01-A	UYX128GAS #11
C007J-U532/ C858J GRA/UTQ/CL/RLP/CX-B	356 364	M5356 M5364	E 6426P E 6427P	D 3222	H 3268	P3816Q P3817Q	MH41E	MT01	MF01-A	UYX128GAS #11

簡單直驅伺服馬達規格件表 / CONVERSION CHART

P1

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	馬達 Motor
										
機 型	規 格	針 座	針 板	主送具	差送具	押 具	上 叉	勾 針	針 號	馬 達
C007JD-W121 C858JD /CH	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	MH41	MT01	YXX128GAS #10	T501HE
C007JD-U121 C858JD /CH	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	—	MT01	YXX128GAS #10	
C007JD-U121 C858JD CH/UTP(UTR)	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	MH41	MT01	YXX128GAS #10	
C007JD-U121 C858JD CH/UTP(UTS)	356 364	M5356 M5364	E3816P E3817P	D4206 D4207	H4458 H4459	P2446-A P2447-A	—	MT01	YXX128GAS #10	
C007JD-W122 C858JD /CH	240 248 256 356 364	M5240 M5248 M5356 M5356 M5364	E3524P E3525P E3826S E3826P E3827P	D4206 D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2446-A P2447-A	—	MT01	YXX128GAS #10	
C007JD-W122 C858JD CH/UTP(UTR)	240 248 256 356 364	M5240 M5248 M5356 M5356 M5364	E3524P E3525P E3826S E3826P E3827P	D4206 D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2446-A P2447-A	MH41	MT01	YXX128GAS #10	

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

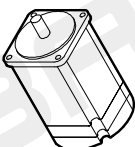
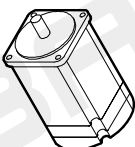
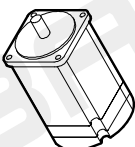
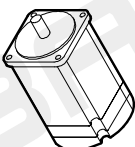
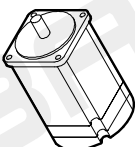
P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A


P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

09/12/11

筒車直軀伺服馬達規格件表 / CONVERSION CHART

P2

機型	SUB-CLASS	針座 NEEDLE CLAMP	針板 NEEDLE PLATE	主送具 MAIN FEED DOG	差送具 DIFF. FEED DOG	押具 PRESSER FOOT	上叉 SPREADER	勾針 LOOPER	針號 NEEDLE	馬達 Motor
C007JD-U122 C858JD /CHA	240	M5240	E3524P	D4206	H4458	P2544-A	—	MT01	UYX128GAS #10	
	248	M5248	E3525P	D4206	H4458	P2545-A	—	MT01	UYX128GAS #10	
	356	M5356	E3826S	D4206	H4458	P2446-A	—	MT01	UYX128GAS #10	
C007JD-U123 C858JD /CH	240	M5240	E3534P	D4206	H4458	P2544-A	—	MT01	UYX128GAS #10	
	248	M5248	E3535P	D4206	H4458	P2545-A	—	MT01	UYX128GAS #10	
	356	M5356	E3836P	D4206	H4458	P2446-A	—	MT01	UYX128GAS #10	
C007JD-U123 C858JD /CH	240	M5240	E3837P	D4207	H4459	P2447-A	—	MT01	UYX128GAS #10	
	248	M5248	E3533P	D4206	H4458	P2545-A	—	MT01	UYX128GAS #10	
	356	M5356	E3836P	D4206	H4458	P2446-A	—	MT01	UYX128GAS #10	
C007JD-W132 C858JD /CHE	240	M5240	E2324P	D2109	H2219	P2904-A	MH41	MT01	UYX128GAS #10	
	248	M5248	E2325P	D2109	H2219	P2905-A	MH41	MT01	UYX128GAS #10	
	356	M5356	E2326P	D2110	H2220	P2906-A	—	MT01	UYX128GAS #10	
C007JD-W132 C858JD /CHE/UTP(UTR)	240	M5240	E2327P	D2110	H2220	P2907-A	—	MT01	UYX128GAS #10	
	356	M5356	E2326P	D2110	H2220	P2906-A	—	MT01	UYX128GAS #10	
	364	M5364	E2327P	D2110	H2220	P2907-A	—	MT01	UYX128GAS #10	

 T501HE












註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替 P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替 P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	馬達
										
機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號	
C007JD-W152 C858JD /CZP/RLQ	356 364	M5356 M5364	E4326 E4327	D3216 D3217	H3262 H3263	P2416-A P2417-A	MH41	MT01	UYX128GAS #10	馬達
C007JD-U152 C858JD /CZP/RLQ	356 364	M5356 M5364	E4326 E4327	D3216 D3217	H3262 H3263	P2416-A P2417-A	—	MT01	UYX128GAS #10	
C007JD-W152 C858JD CZP/CLA/RLQ	356 364	M5356 M5364	E4326 E4327	D3216 D3217	H3262 H3263	P2416-A P2417-A	MH41	MT01	UYX128GAS #10	
C007JD-U152 C858JD CZP/CLA/RLQ	356 364	M5356 M5364	E4326 E4327	D3216 D3217	H3262 H3263	P2416-A P2417-A	—	MT01	UYX128GAS #10	
C007JD-W162 C858JD	240 248 356 364	M5240 M5248 M5356 M5356	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	—	MT01A	TVX5 #14~16	
C007JD-U162 C858JD	240 248 356 364	M5240 M5248 M5356 M5364	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	MH41	MT01A	TVX5 #14~16	
C007JD-W162 C858JD /UTP (UTR)	240 248 356 364	M5240 M5248 M5356 M5364	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	—	MT01A	TVX5 #14~16	
C007JD-U162 C858JD /UTQ (UTS)	240 248 356 364	M5240 M5248 M5356 M5356	E3544 E3545 E3846 E3847	D4206 D4206 D4206 D4207	H4458 H4458 H4458 H4459	P2544-A P2545-A P2446-A P2447-A	—	MT01A	TVX5 #14~16	

☐ T501HE

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

P4

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	馬達
C007JD-W222 C858JD /CC	240	M5240	E4124P	D3216	H3362	P1814-A	MH41	MT01	YXX128GAS #10	Motor
	248	M5248	E4125P	D3216	H3362	P1815-A				
	356	M5356	E4426P	D3216	H3362	P2116-A				
C007JD-U222 C858JD /CC	364	M5364	E4427P	D3217	H3363	P2117-A	—			
C007JD-C858JD /COA/CLA	256	M5356	E2326Q	D2110	H2220Q	P2906Q-A	MH41	MT01A	TVX5 #14	
C007JD-W322 C858JD /CC	356	M5356	E2826P	D2107L	H3259M	P2456-A	MH41	MT01	YXX128GAS #10	T501HE
	364	M5364	E2827P	D2107L	H3259M	P2457-A				
C007JD-U322 C858JD /CC	356	M5356	E2826P	D2107L	H3259M	P2456-A	—	MT01	YXX128GAS #10	
	364	M5364	E2827P	D2107L	H3259M	P2457-A	MH41	MT01	YXX128GAS #10	
C007JD-W322 C858JD /CC/UTP(UTR)	356	M5356	E2826P	D2107L	H3259M	P2456-A	—	MT01	YXX128GAS #10	
	364	M5364	E2827P	D2107L	H3259M	P2457-A	MH41	MT01	YXX128GAS #10	
C007JD-U322 C858JD /CC/UTQ(UTS)	356	M5356	E2826P	D2107L	H3259M	P2456-A	—	MT01	YXX128GAS #10	
	364	M5364	E2827P	D2107L	H3259M	P2457-A				

註(1) : P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A代替 P2544-A/P2545-A
 P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

09/12/11











P2446-A/P2447-A為固定式押具舌,亦可使用活動式押具舌 P2466-A代替 P2446-A/P2447-A
 P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

註(2) : C007JD-W/U322A-356 /CC 時, 該針板與送具改用 C007JD-W/U122-356 之針板與送具, 加附CHJ-A
 C858JD

When W/U322A-356 /CC, The needle plate and the feed dog have to be replaced by C007JD-W/U122-356 needle plate and the feed dog, with CHJ-A attached.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

P5

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	馬達 Motor
										
C007JD-W322 C858JD /CE	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	MH41	MT01	YXX128GAS #10	T501HE
C007JD-U322 C858JD /CE	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	—	MT01	YXX128GAS #10	
C007JD-W322 C858JD /CE/UTP(UTR)	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	MH41	MT01	YXX128GAS #10	
C007JD-U322 C858JD /CE/UTQ(UTS)	356 364	M5356 M5364	E2626P E2627P	D2107	H3159	P2456-A P2457-A	—	MT01	YXX128GAS #10	












註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A

P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.

P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A

P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

筒車直驅何服馬達規格件表 / CONVERSION CHART

機型	SUB-CLASS	針座	針板	主送具	差送具	押具	上叉	勾針	針號	馬達
										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	Motor
機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號	馬達
C007JD-W512 C858JD /FE	240 356 364	M5240 M5356 M5364	E3524R E3826R E3827R	D4206 D4206 D4207	H4458 H4458 H4459	P2914-A P3216-A P3217-A	MH41	MT01	YYX128GAS #10	
C007JD-U512 C858JD /FE	240 356 364	M5240 M5356 M5364	E3524R E3826R E3827R	D4206 D4206 D4207	H4458 H4458 H4459	P3414-A P3716-A P3717-A	—	MT01	YYX128GAS #10	
C007JD-W522 C858JD /FE/CR/CL	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	MH41	MT01	YYX128GAS #10	
C007JD-U522 C858JD /FE/CR/CL	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	—	MT01	YYX128GAS #10	
C007JD-W532/ C858JD CR/UTP/CL/RLP/CX	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	MH41	MT01	YYX128GAS #10	T501HE
C007JD-U532/ C858JD CR/UTP/CL/RLP/CX	356 364	M5356 M5364	E6426R E6427R	D3222	H3268	P3816R-A P3817R-A	MH41	MT01	YYX128GAS #10	
C007JD-W922/ C858JD CW	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SNX1014B#10 (MY1014B#70,S,Y7256)	
C007JD-W922/ C858JD CW/UTP	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SNX1014B#10 (MY1014B#70,S,Y7256)	
C007JD-W922/ C858JD CW/UTR	456 464	M5456 M5464	E1828P E1848P	D2107M	H4459M	P2428Q-A P2448Q-A	MH41	MT01B	SNX1014B#10 (MY1014B#70,S,Y7256)	

註： C007JD/C858JD不可加裝FFC

FFC can not be attached to C007JD/C858JD.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

P7

機型	SUB-CLASS	針座	針板	主送具	差送具	押具	上叉	勾針	針號	馬達
C007JD -W811 C858JD /CRL/RL	248	M5248	E0215R	D2101Q	H2203R	P2765-A	MH41	MT01	TXV5 #14	Motor
	356	M5356	E0216R	D2101Q	H2203R	P2766-A	MH41	MT01	TXV5 #14	
	364	M5364	E0217R	D2101Q	H2203Q	P2767-A	MH41	MT01	TXV5 #14	
	248	M5248	E0215Q	D2101Q	H2203Q	P2765-A	—	MT01	TXV5 #14	
C007JD -U811 C858JD /CRL/RL	248	M5248	E0215R	D2101Q	H2203R	P2765-A	—	MT01	TXV5 #14	Motor
	356	M5356	E0216R	D2101Q	H2203R	P2766-A	MH41	MT01	TXV5 #14	
	364	M5364	E0217R	D2101Q	H2203R	P2767-A	—	MT01	TXV5 #14	
	248	M5248	E0215Q	D2101Q	H2203Q	P2765-A	—	MT01	TXV5 #14	
C007JD -W811A C858JD /CRL/RL	248	M5248	E0215Q	D2101Q	H2203Q	P2765-A	—	MT01	TXV5 #14	Motor
	356	M5356	E0216Q	D2101Q	H2203Q	P2766-A	—	MT01	TXV5 #14	
	364	M5364	E0217Q	D2101Q	H2203R	P2767-A	—	MT01	TXV5 #14	
	248	M5248	E0215Q	D2101Q	H2203Q	P2765-A	—	MT01	TXV5 #14	
C007JD -U811A C858JD /CRL/RL	248	M5248	E0215R	D2101Q	H2203R	P2765-A	—	MT01	TXV5 #14	Motor
	356	M5356	E0216R	D2101Q	H2203R	P2766-A	MH41	MT01	TXV5 #14	
	364	M5364	E0217R	D2101Q	H2203R	P2767-A	—	MT01	TXV5 #14	
	248	M5248	E0215Q	D2101Q	H2203Q	P2765-A	—	MT01	TXV5 #14	
C007JD -W812 C858JD /CRL/RL	248	M5248	E0225R	D2101Q	H2203R	P2765-A	MH41	MT01	UYX128GAS #10	Motor
	356	M5356	E0226R	D2101Q	H2203R	P2766-A	MH41	MT01	UYX128GAS #10	
	364	M5364	E0227R	D2101Q	H2203Q	P2767-A	MH41	MT01	UYX128GAS #10	
	248	M5248	E0225Q	D2101Q	H2203Q	P2765-A	—	MT01	UYX128GAS #10	
C007JD -U812 C858JD /CRL/RL	248	M5248	E0225R	D2101Q	H2203R	P2765-A	—	MT01	UYX128GAS #10	Motor
	356	M5356	E0226R	D2101Q	H2203R	P2766-A	—	MT01	UYX128GAS #10	
	364	M5364	E0227R	D2101Q	H2203R	P2767-A	—	MT01	UYX128GAS #10	
	248	M5248	E0225Q	D2101Q	H2203Q	P2765-A	—	MT01	UYX128GAS #10	
C007JD -U812A C858JD /CRL/RL	248	M5248	E0225Q	D2101Q	H2203Q	P2765-A	—	MT01	UYX128GAS #10	Motor
	356	M5356	E0226Q	D2101Q	H2203Q	P2766-A	—	MT01	UYX128GAS #10	
	364	M5364	E0227Q	D2101Q	H2203Q	P2767-A	—	MT01	UYX128GAS #10	
	248	M5248	E0225Q	D2101Q	H2203Q	P2765-A	—	MT01	UYX128GAS #10	

☐ T501HE










註：C007JD -W812A/W813A機型之針板與差送具為5排齒。

The needle plate and the differential feed dog of W812A/W813A model are five teeth.

C007JD -W812/W813 機型之針板與差送具為4排齒。

The needle plate and the differential feed dog of W812/W813 model are four teeth.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE	馬達 Motor
										
機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號	馬達
C007JD-W812 C858JD CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W812A C858JD CRL/UTP/RL	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W812 C858JD /CRL/UTR	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W812A C858JD /CRL/UTR	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W812 C858JD /CRL/UTS	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W812A C858JD /CRL/UTS	248 356 364	M5248 M5356 M5364	E0225Q E0226Q E0227Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W813 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W813A C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	YXX128GAS #10	
C007JD-W813 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	—	MT01	YXX128GAS #10	
C007JD-W813A C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	—	MT01	YXX128GAS #10	

☐ T501HE


註：C007JD-W812A/W813A機型之針板與差送具為5排齒。


The needle plate and the differential feed dog of W812A/W813A model are five teeth.

C007JD-W812/W813 機型之針板與差送具為4排齒。

The needle plate and the differential feed dog of W812/W813 model are four teeth.

筒車直驅伺服馬達規格件表 / CONVERSION CHART

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	針號	馬達
C007JD-W813 C858JD /CRL/UTR	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14	
C007JD-W813A C858JD /CRL/UTR	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14	
C007JD-U813 C858JD /CRL/UTS	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	MH41	MT01	TVX5 #14	
C007JD-U813A C858JD /CRL/UTS	248 356 364	M5248 M5356 M5364	E0235Q E0236Q E0237Q	D2101Q	H2203Q	P0965-A P0966-A P0967-A	MH41	MT01	TVX5 #14	
C007JD-W822 C858JD /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYXX128GAS #10	
C007JD-W823 C858JD /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14	
C007JD-U822 C858JD /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYXX128GAS #10	
C007JD-U823 C858JD /CRL/CY/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TVX5 #14	
C007JD-W822 C858JD /CRL/CY/UTP/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	UYXX128GAS #10	
C007JD-W823 C858JD /CRL/CY/UTP/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P2765-A P2766-A P2767-A	MH41	MT01	TVX5 #14	

 T501HE












註：C007JD-W812A/W813A 機型之針板與差送具為 5 排齒。
C858JD

The needle plate and the differential feed dog of W812A/W813A model are five teeth.

C007JD-W812/W813 機型之針板與差送具為 4 排齒。
C858JD

The needle plate and the differential feed dog of W812/W813 model are four teeth.

筒車直驅伺服馬達規格件表 / CONVERSION CHART


MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE 針號	Motor
										
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	上 叉	勾 針	針 號	馬 達
C007JD-U822 C858JD CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10	T501HE
C007JD-U823 C858JD CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TVX5 #14	
C007JD-U822 C858JD CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0225R E0226R E0227R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	UYX128GAS #10	
C007JD-U823 C858JD CRL/CY/UTQ/CL/RL	248 356 364	M5248 M5356 M5364	E0235R E0236R E0237R	D2101Q	H2203R	P0965-A P0966-A P0967-A	—	MT01	TVX5 #14	

筒車直驅伺服馬達規格件表 / CONVERSION CHART

P11

機型	規格	針座	針板	主送具	差送具	押具	上叉	勾針	偏心凸輪	針號
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	CAM	NEEDLE
C007JD -W522 C858JD /FE(FEC)/CRB/CL	356 364	M5356 M5364	E 6426P E6427P	D 3222	H 3268	P3116 P3117	MH41E	MT01	MF01 - A	UYX128GAS #11
C007JD -U522 C858JD /FE(FEC)/CRB/CL	356 364	M5356 M5364	E 6426P E6427P	D 3222	H 3268	P3116 P3117	—	MT01	MF01 - A	UYX128GAS #11
C007JD -W812 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E 0225R E 0226R E 0227R	D2101Q	H2203R	P2765 P2766 P2767	MH41E	MT01	MF91 - A	UYX128GAS #11
C007JD -U812 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E 0225R E 0226R E 0227R	D2101Q	H2203R	P0965 P0966 P0967	—	MT01	MF91 - A	UYX128GAS #11
C007JD -W813 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E 0235R E 0236R E 0237R	D2101Q	H2203R	P2765 P2766 P2767	MH41E	MT01	MF91 - A	UYX128GAS #11
C007JD -U813 C858JD /CRL/RL	248 356 364	M5248 M5356 M5364	E 0235R E 0236R E 0237R	D2101Q	H2203R	P0965 P0966 P0967	—	MT01	MF91 - A	UYX128GAS #11

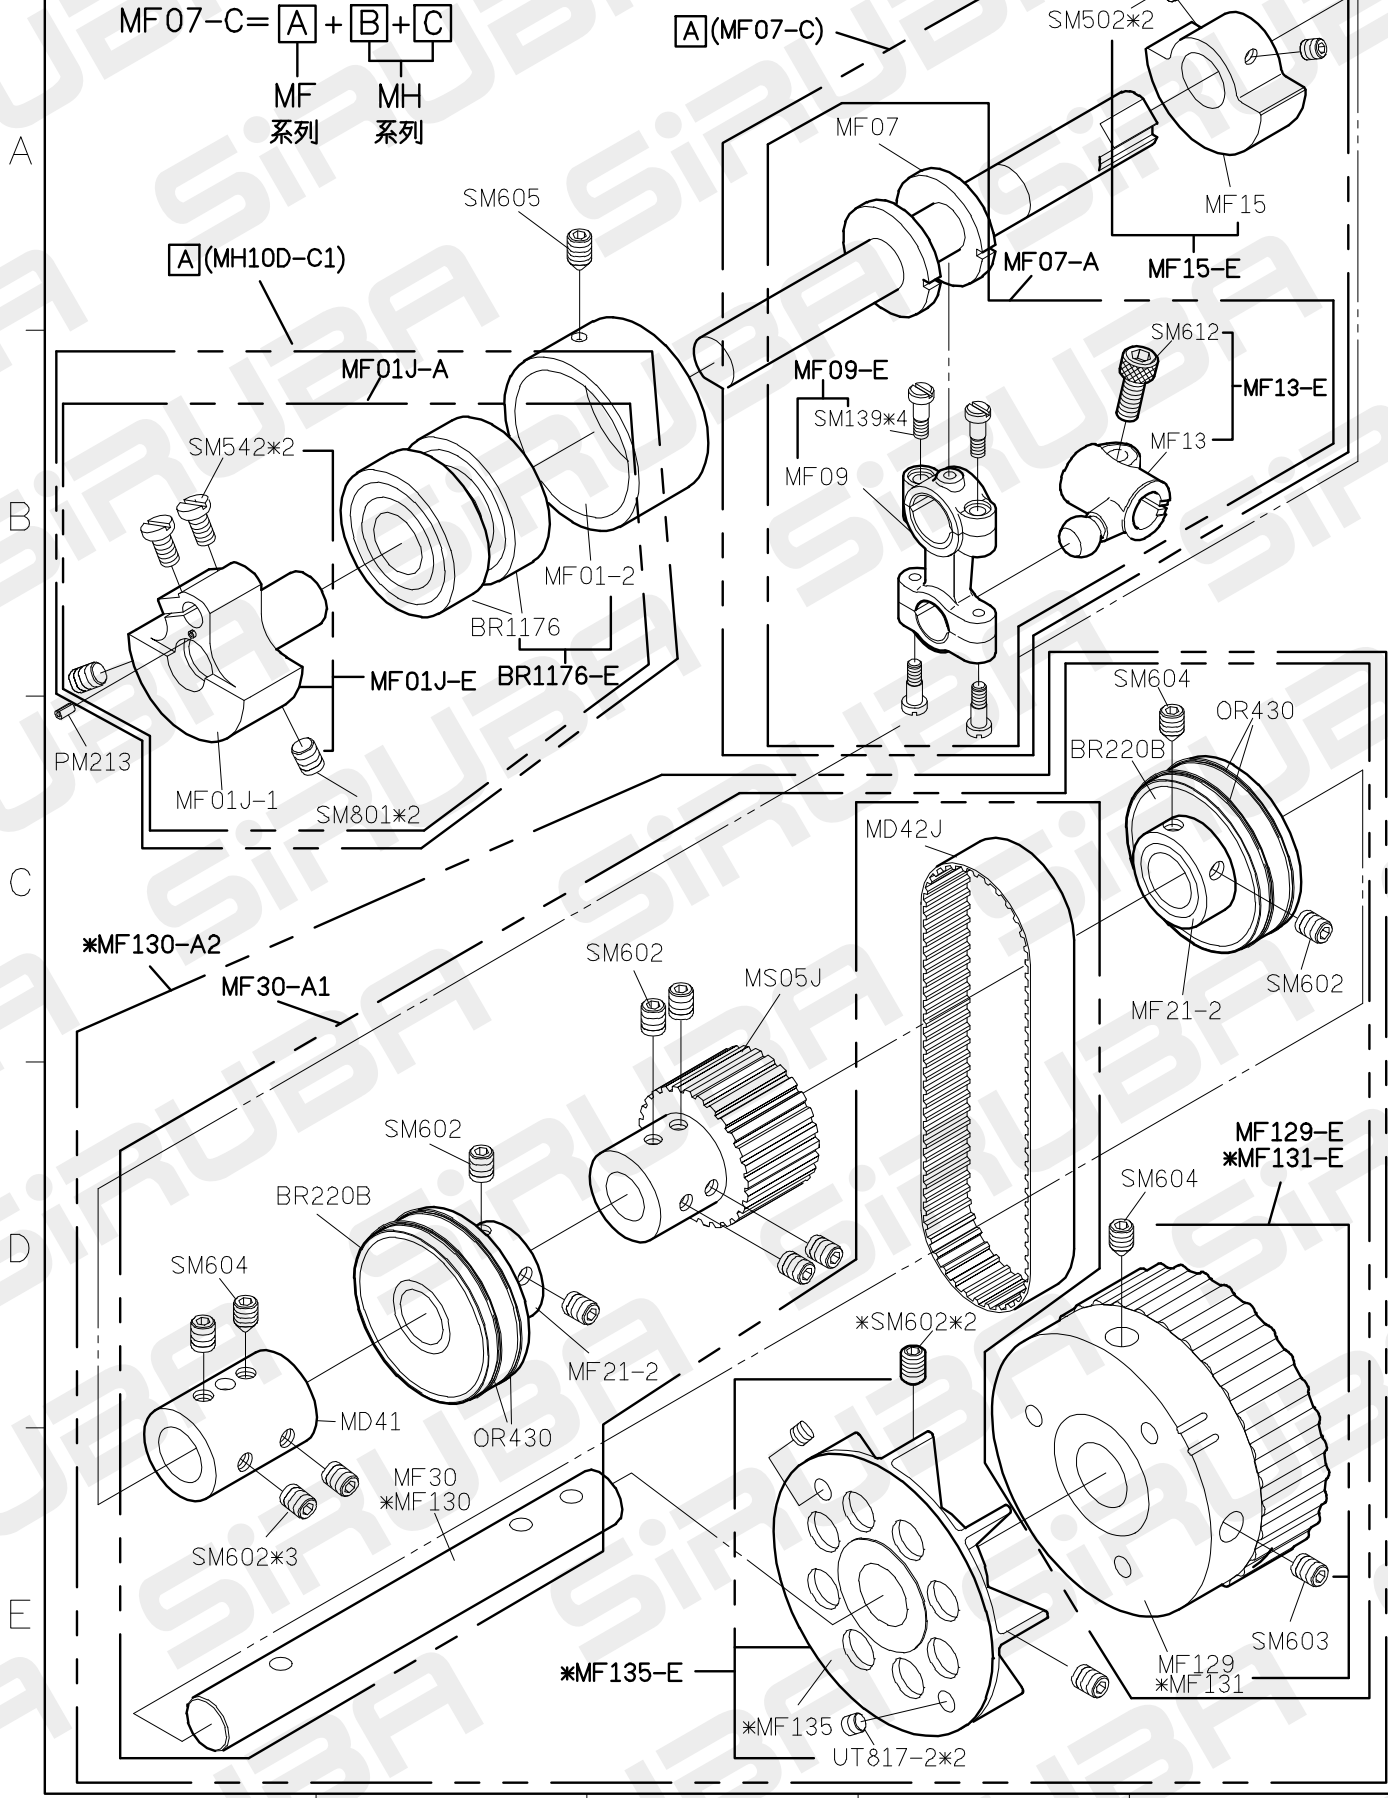C007JD PARTS LIST FOR MF GROUP P.1/1



C007JD PARTS LIST FOR MG GROUP P.1/1

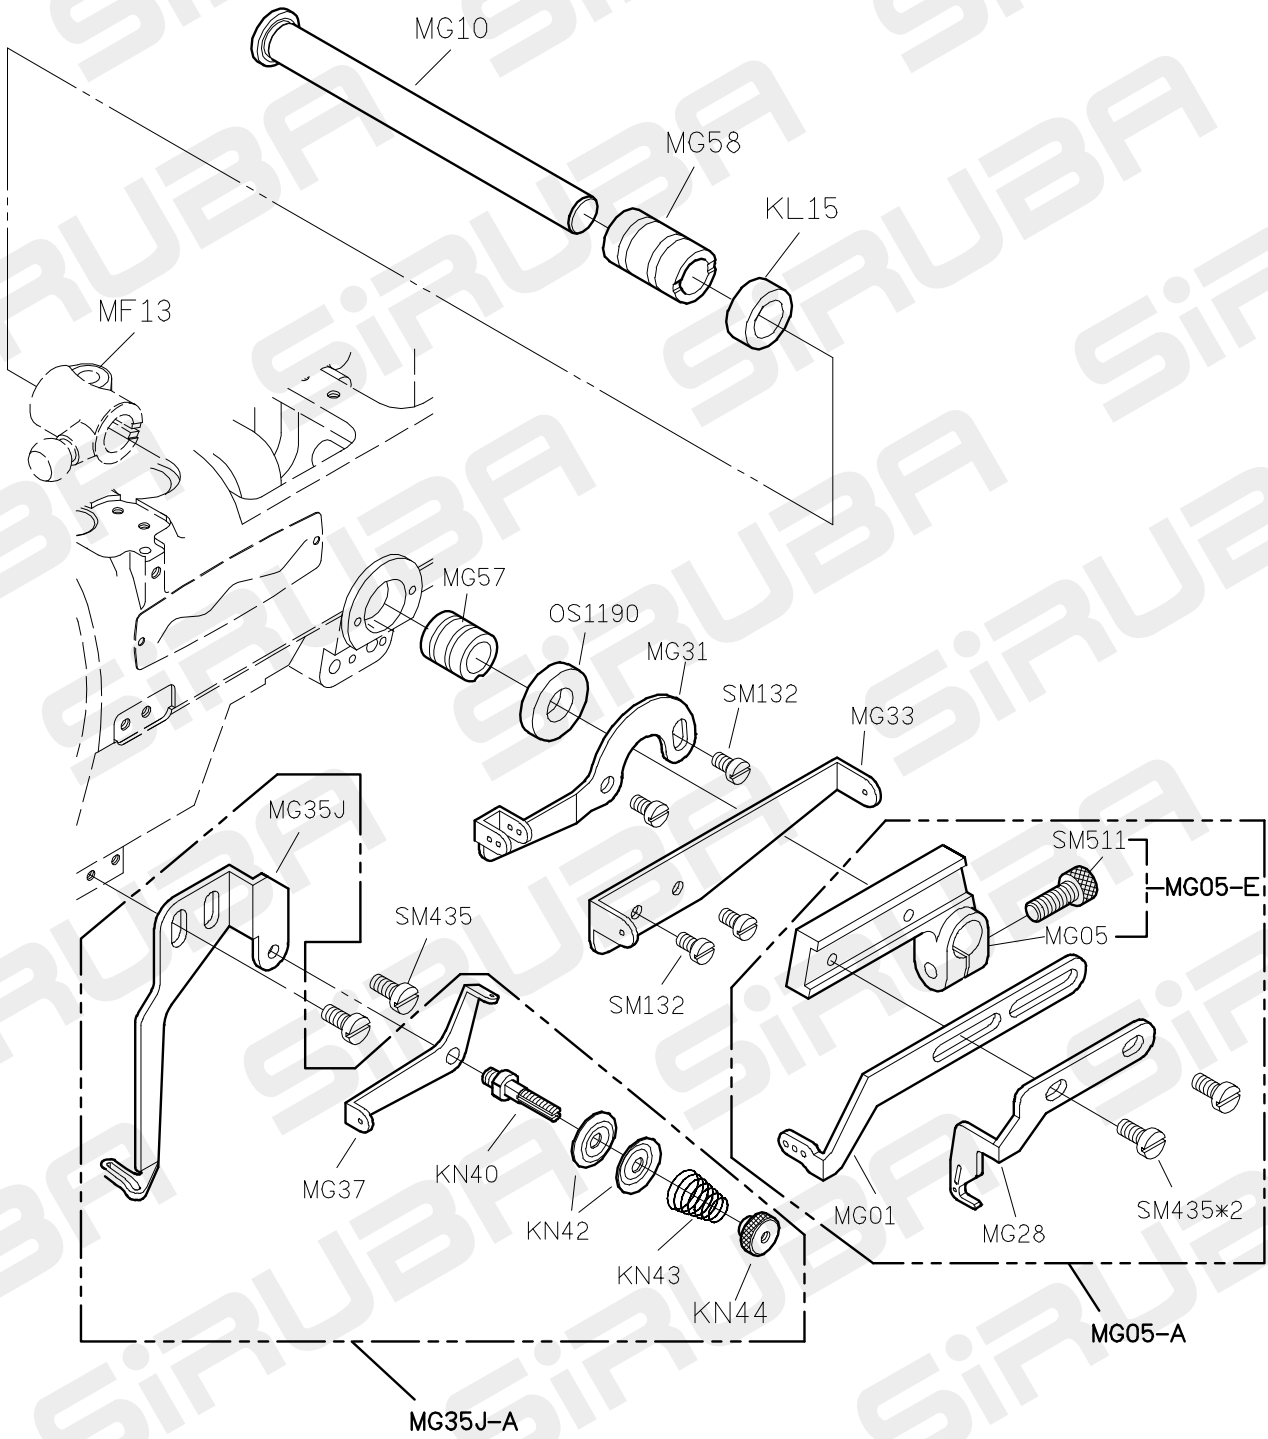
A

B


C

D


E



C007JD PARTS LIST FOR MH GROUP P.1/1

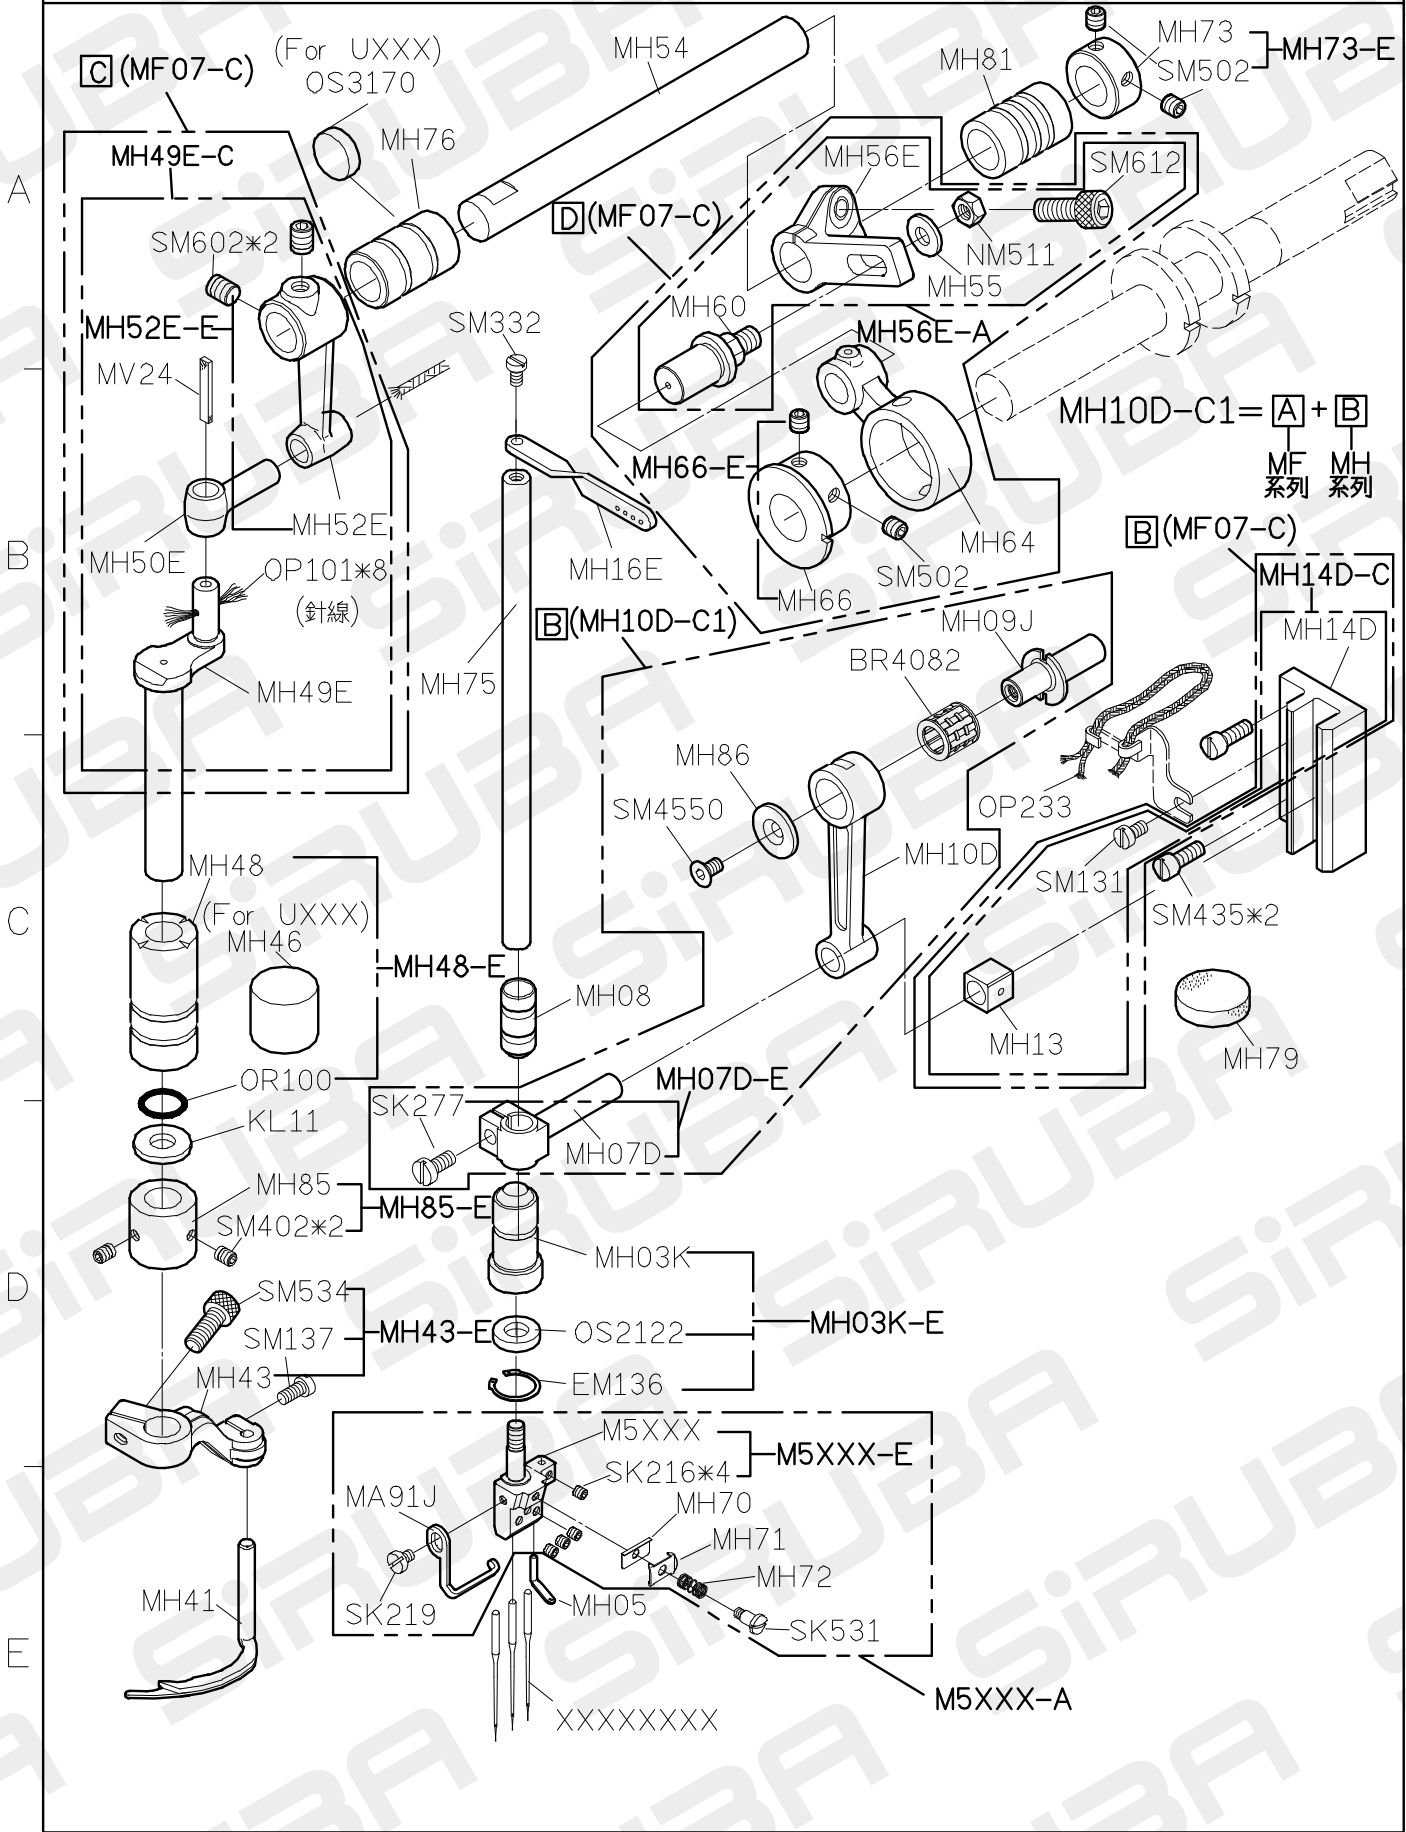


C007JD PARTS LIST FOR MJ GROUP P.1/1

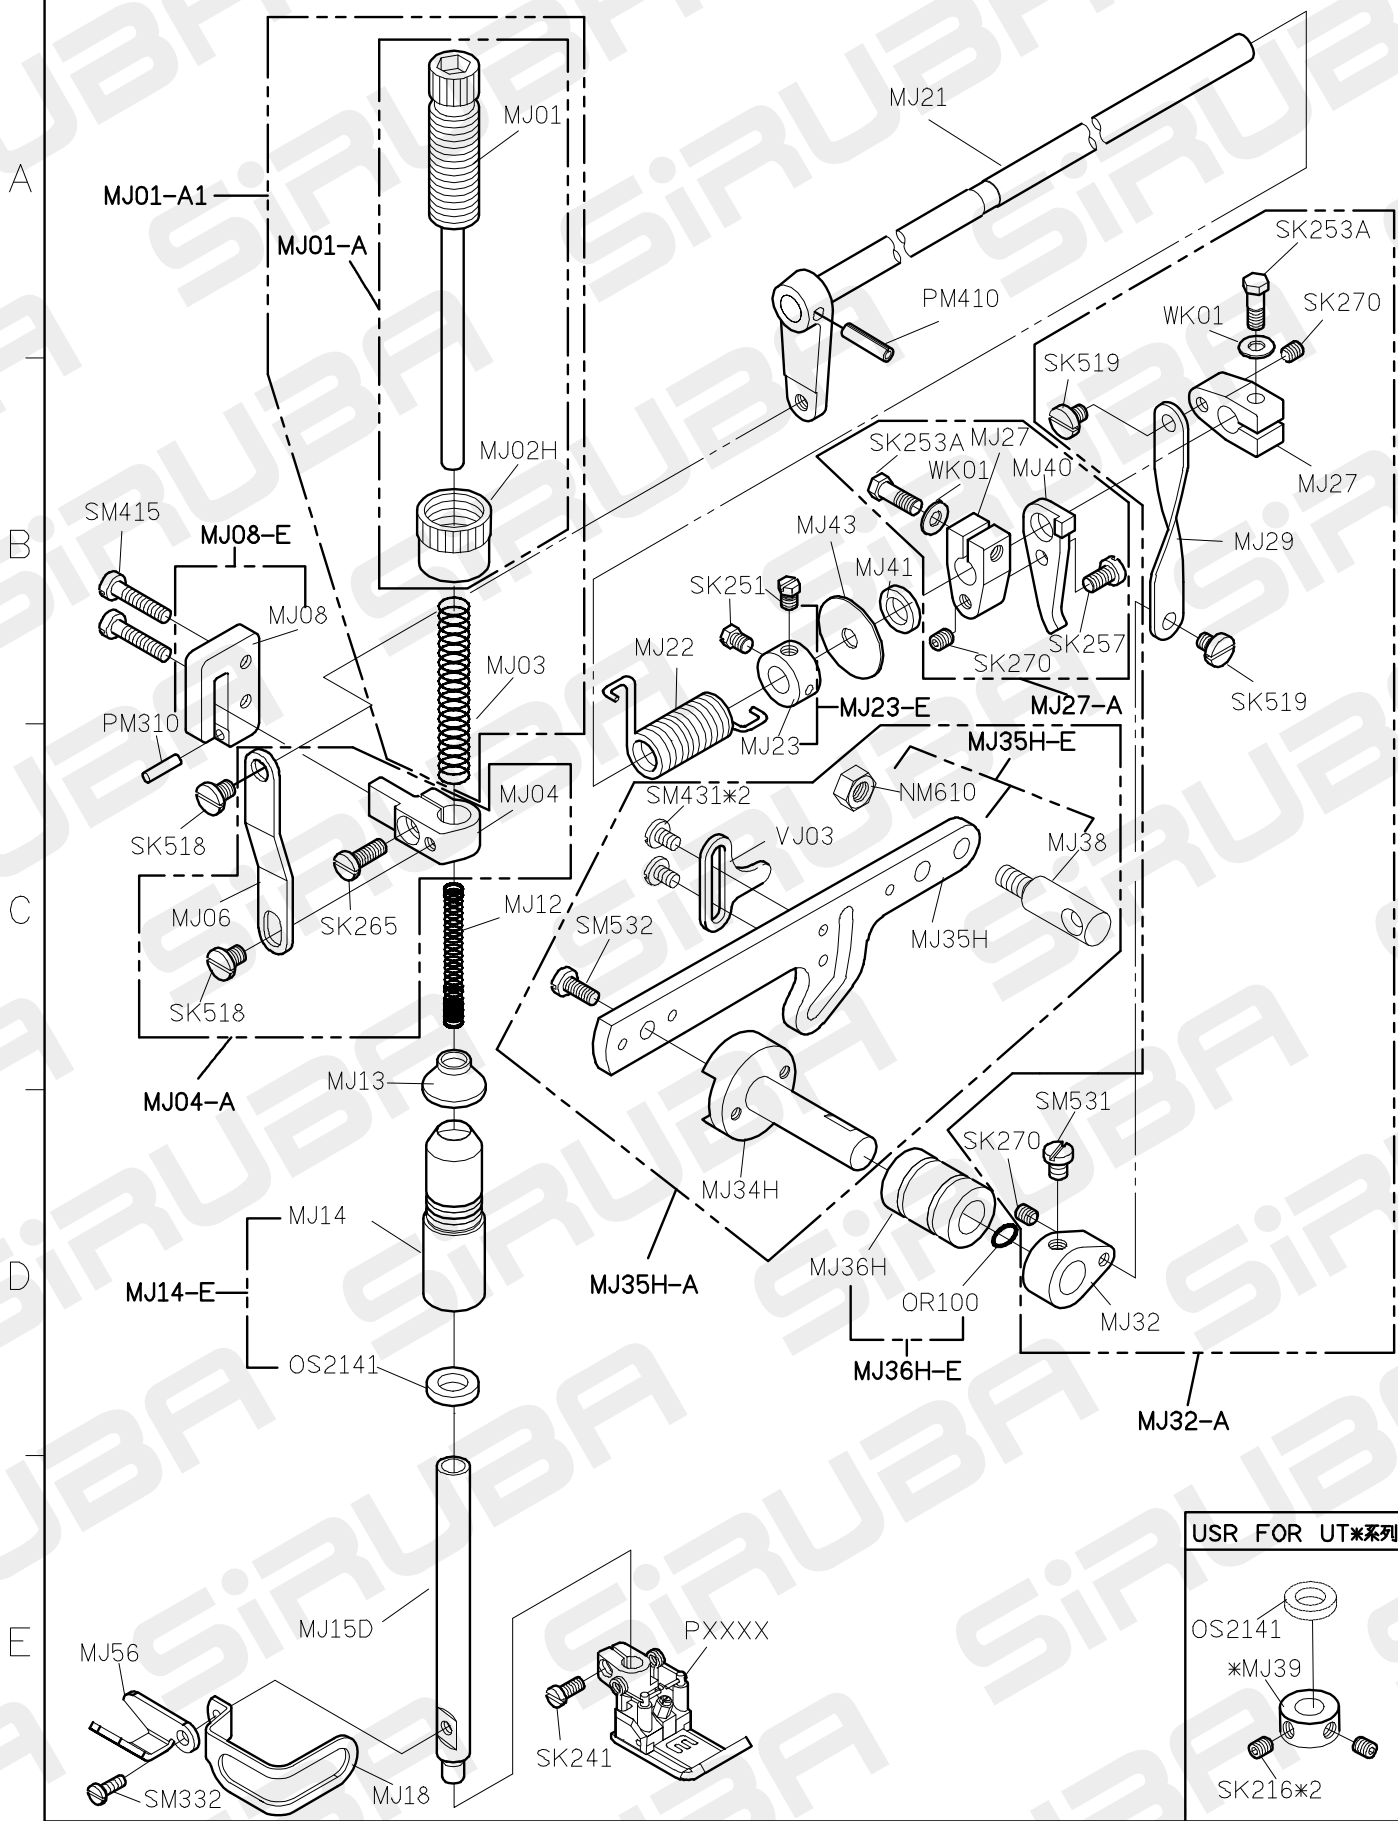


FOR C007J/C007JD/C858J/C858JD/S007K/S007KD

11/04/11

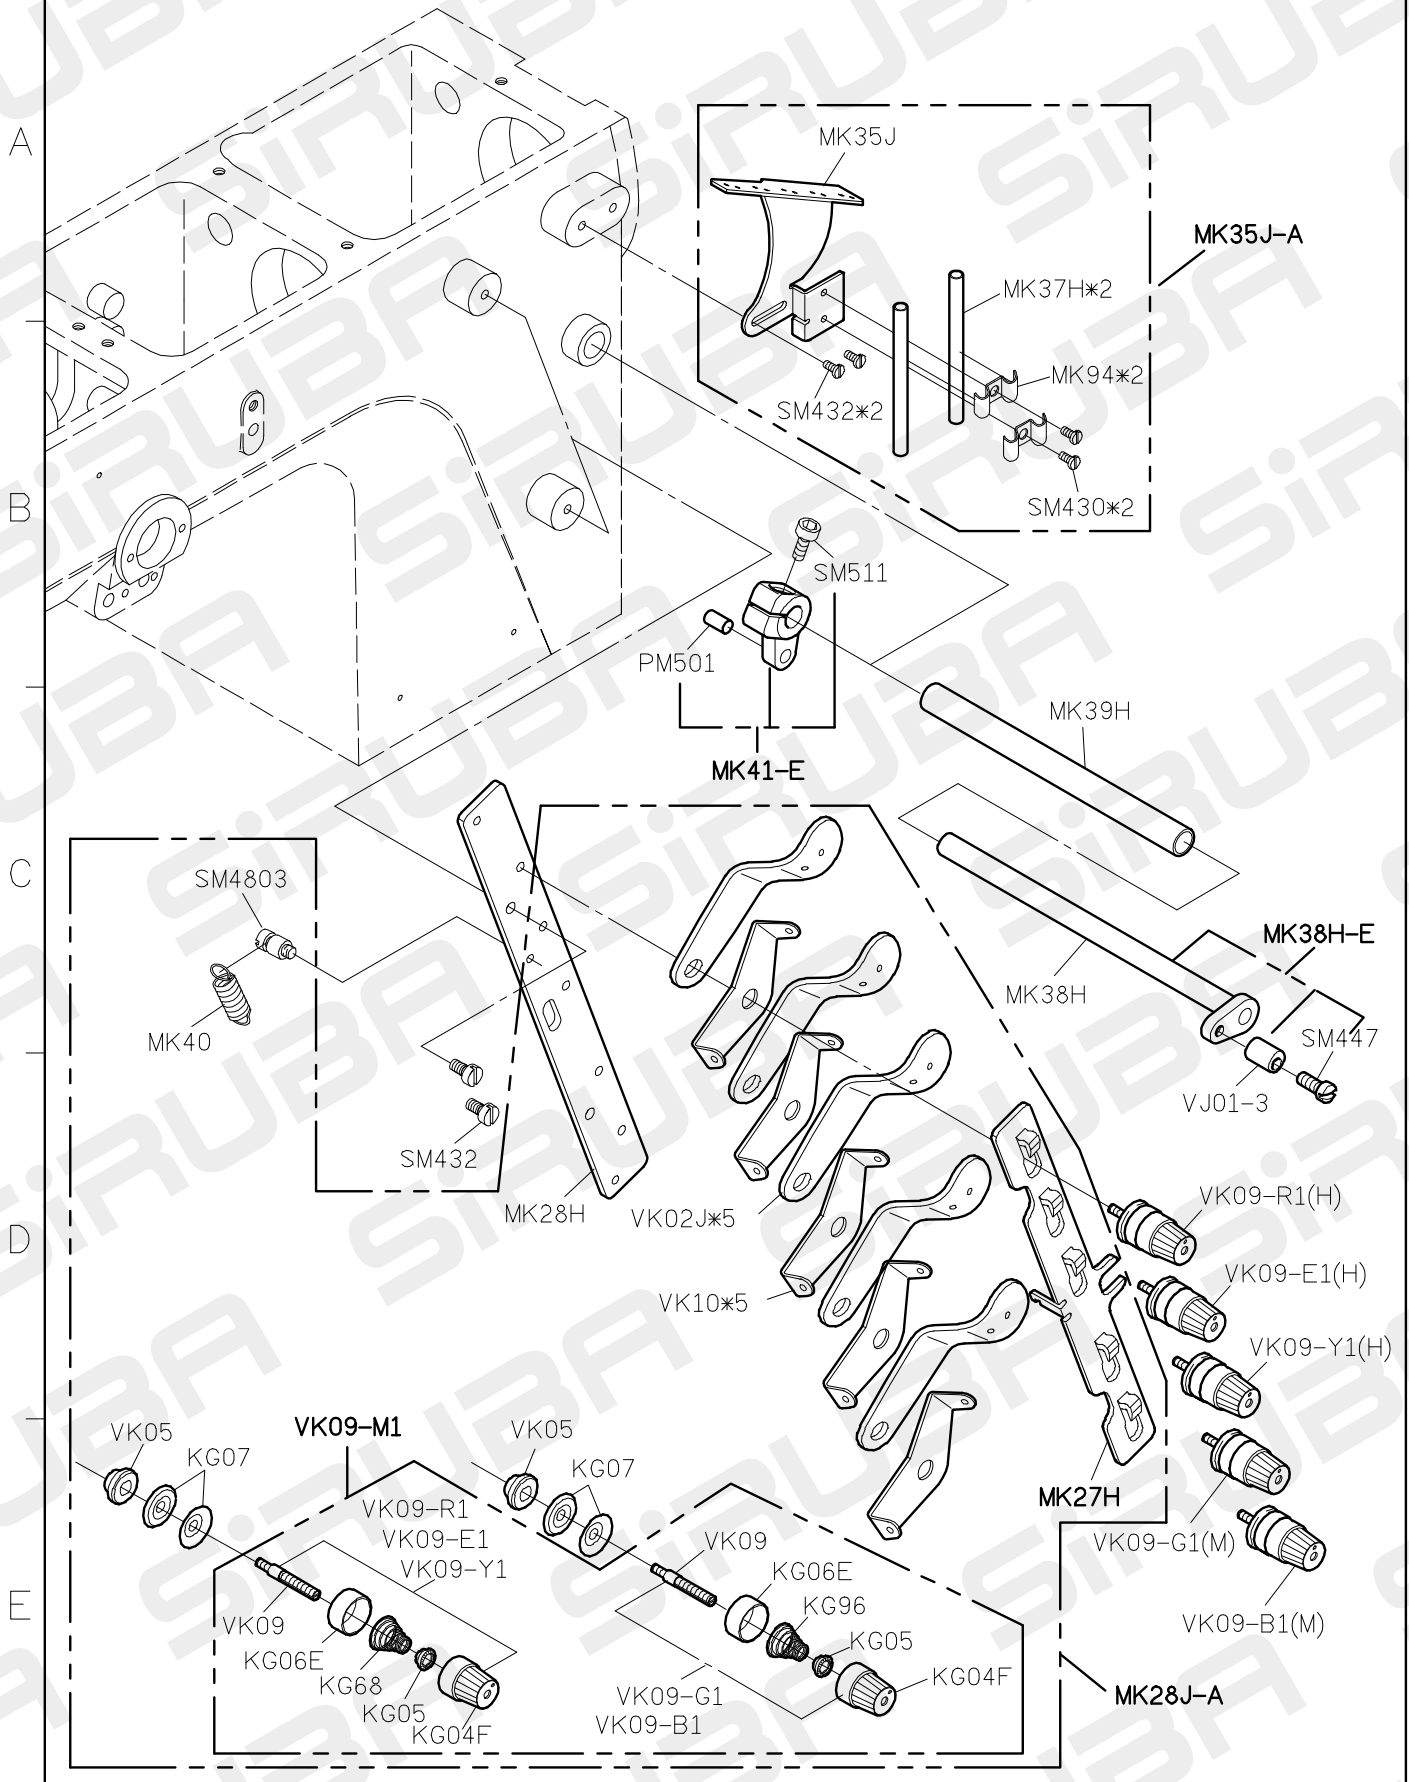
C007JD PARTS LIST FOR MK GROUP P.1/1



C007JD PARTS LIST FOR MN GROUP P.1/2

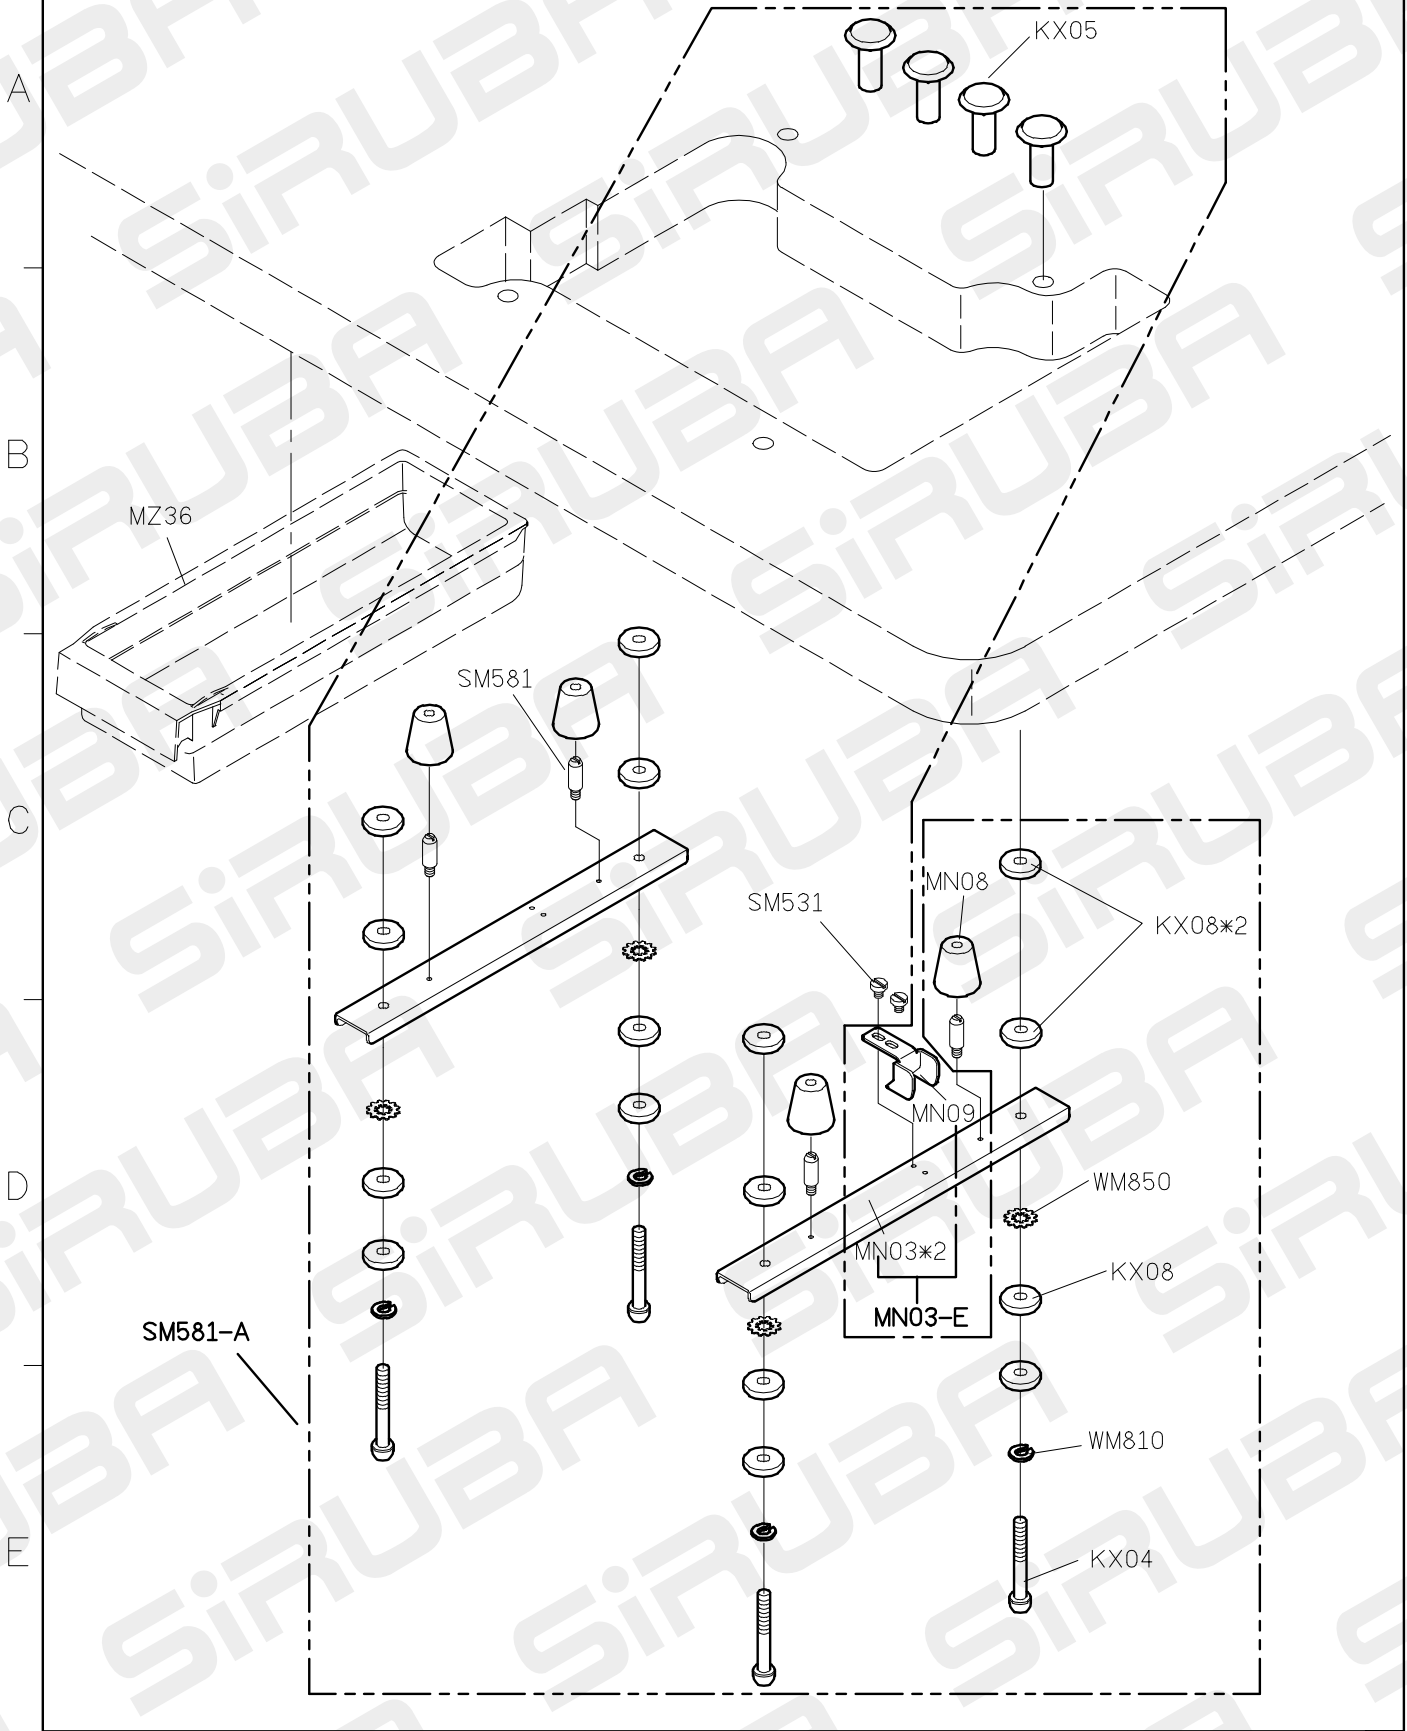


C007JD PARTS LIST FOR MN GROUP P.2/2

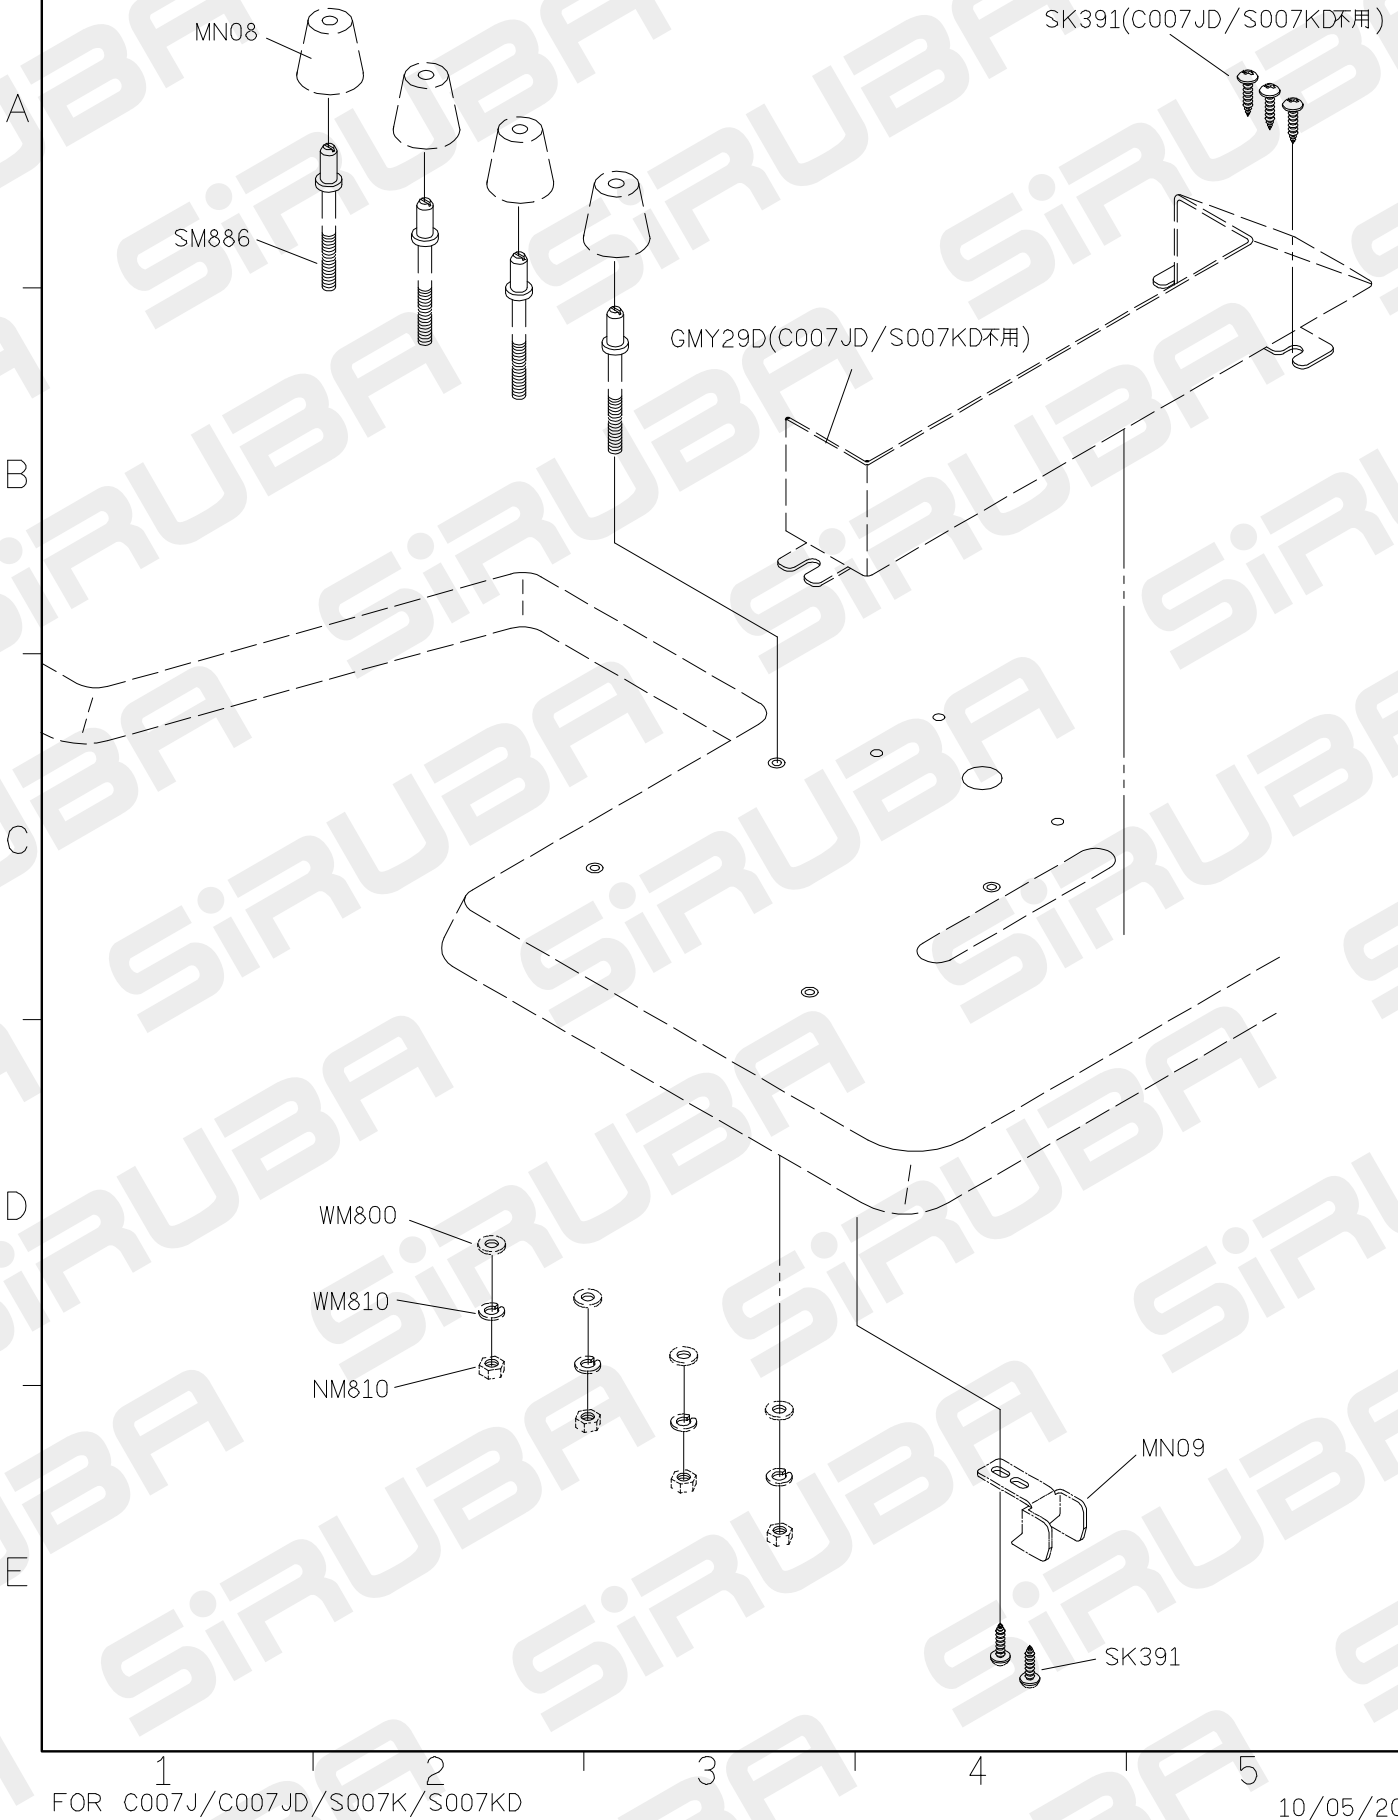

FOR C007J/C007JD/S007K/S007KD

10/05/20

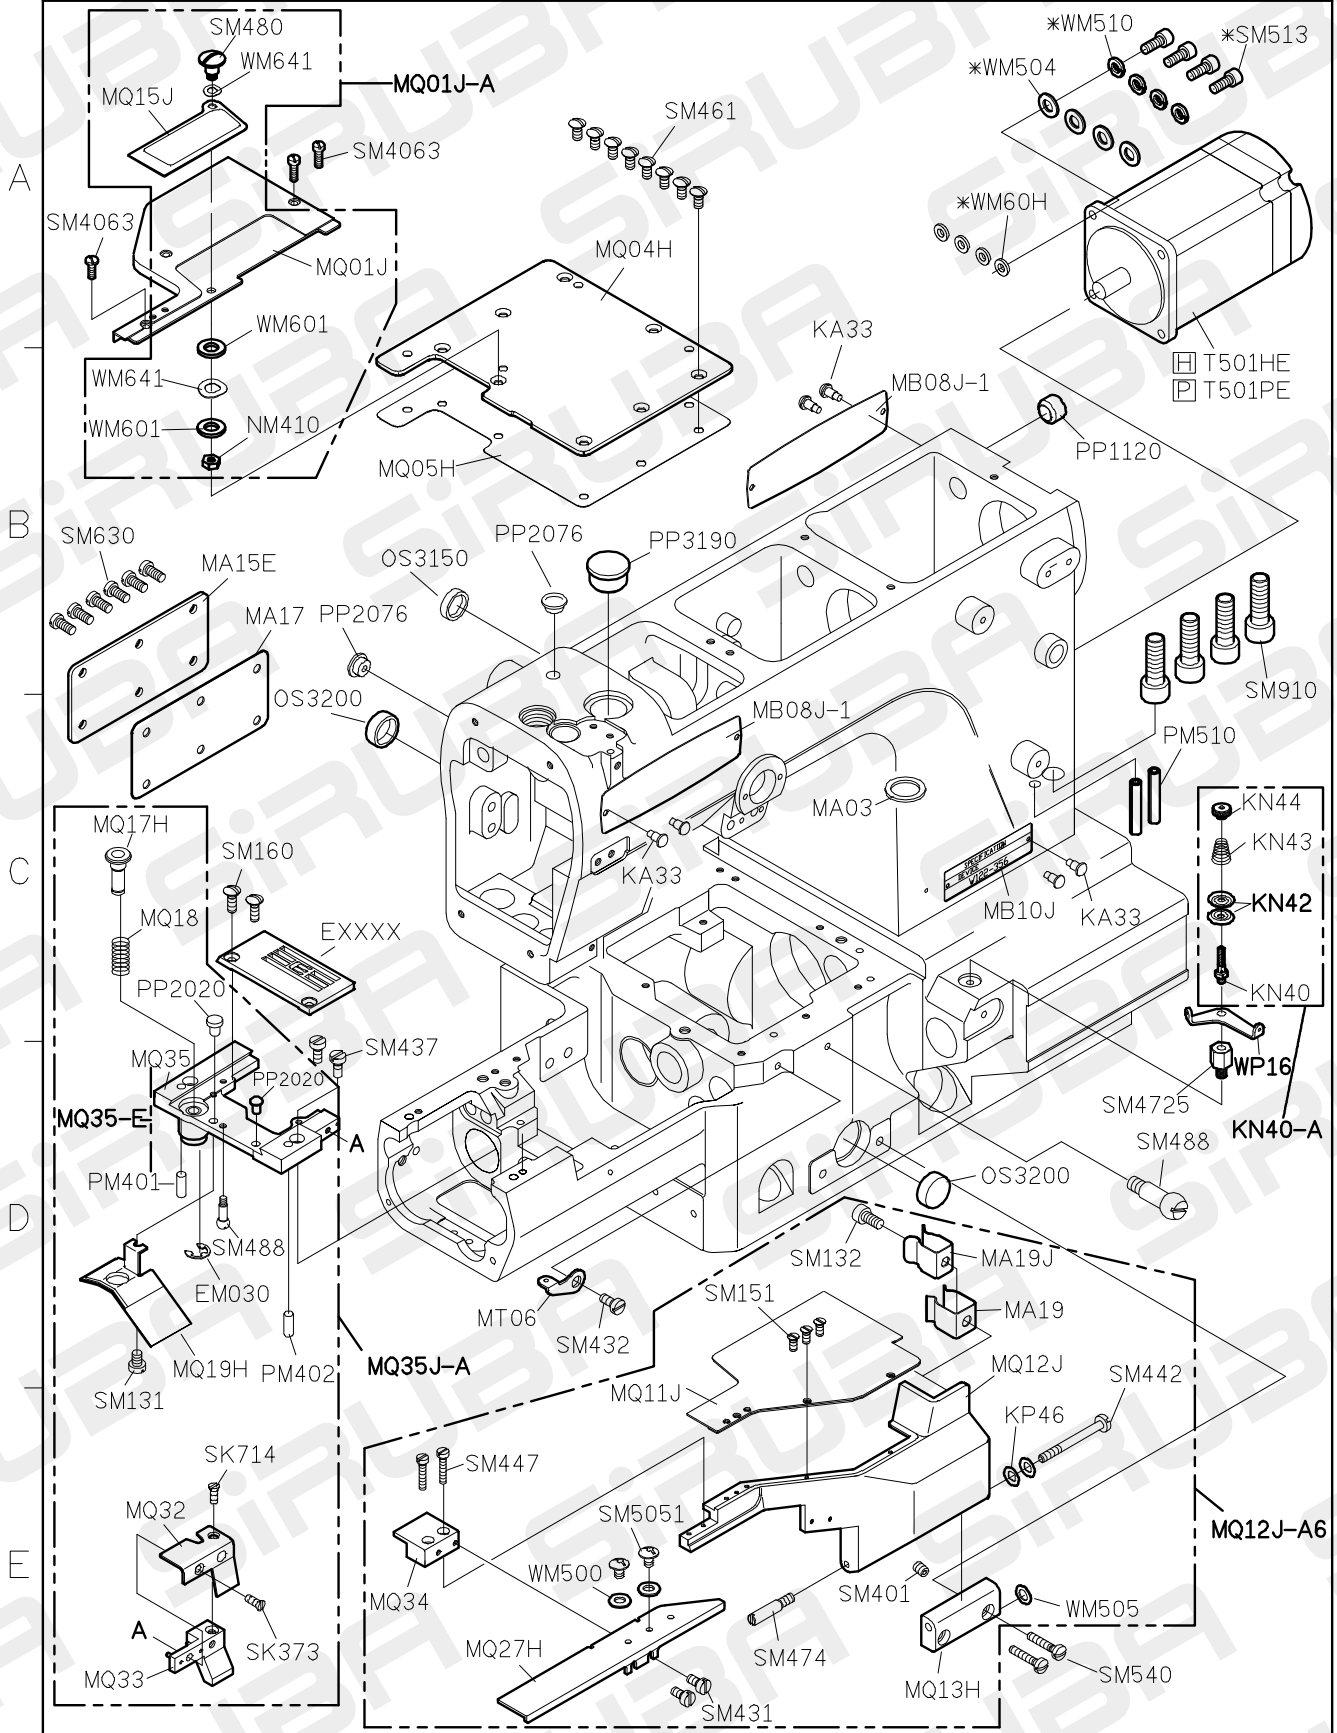C007JD PARTS LIST FOR MQ-J GROUP P.1/1




FOR C007J/C007JD/C858J/C858JD
 * USE FOR C007JD/C858JD

FOR C007JD/C858JD H牌馬達
 FOR C007JD/C858JD P牌馬達

10/05/20

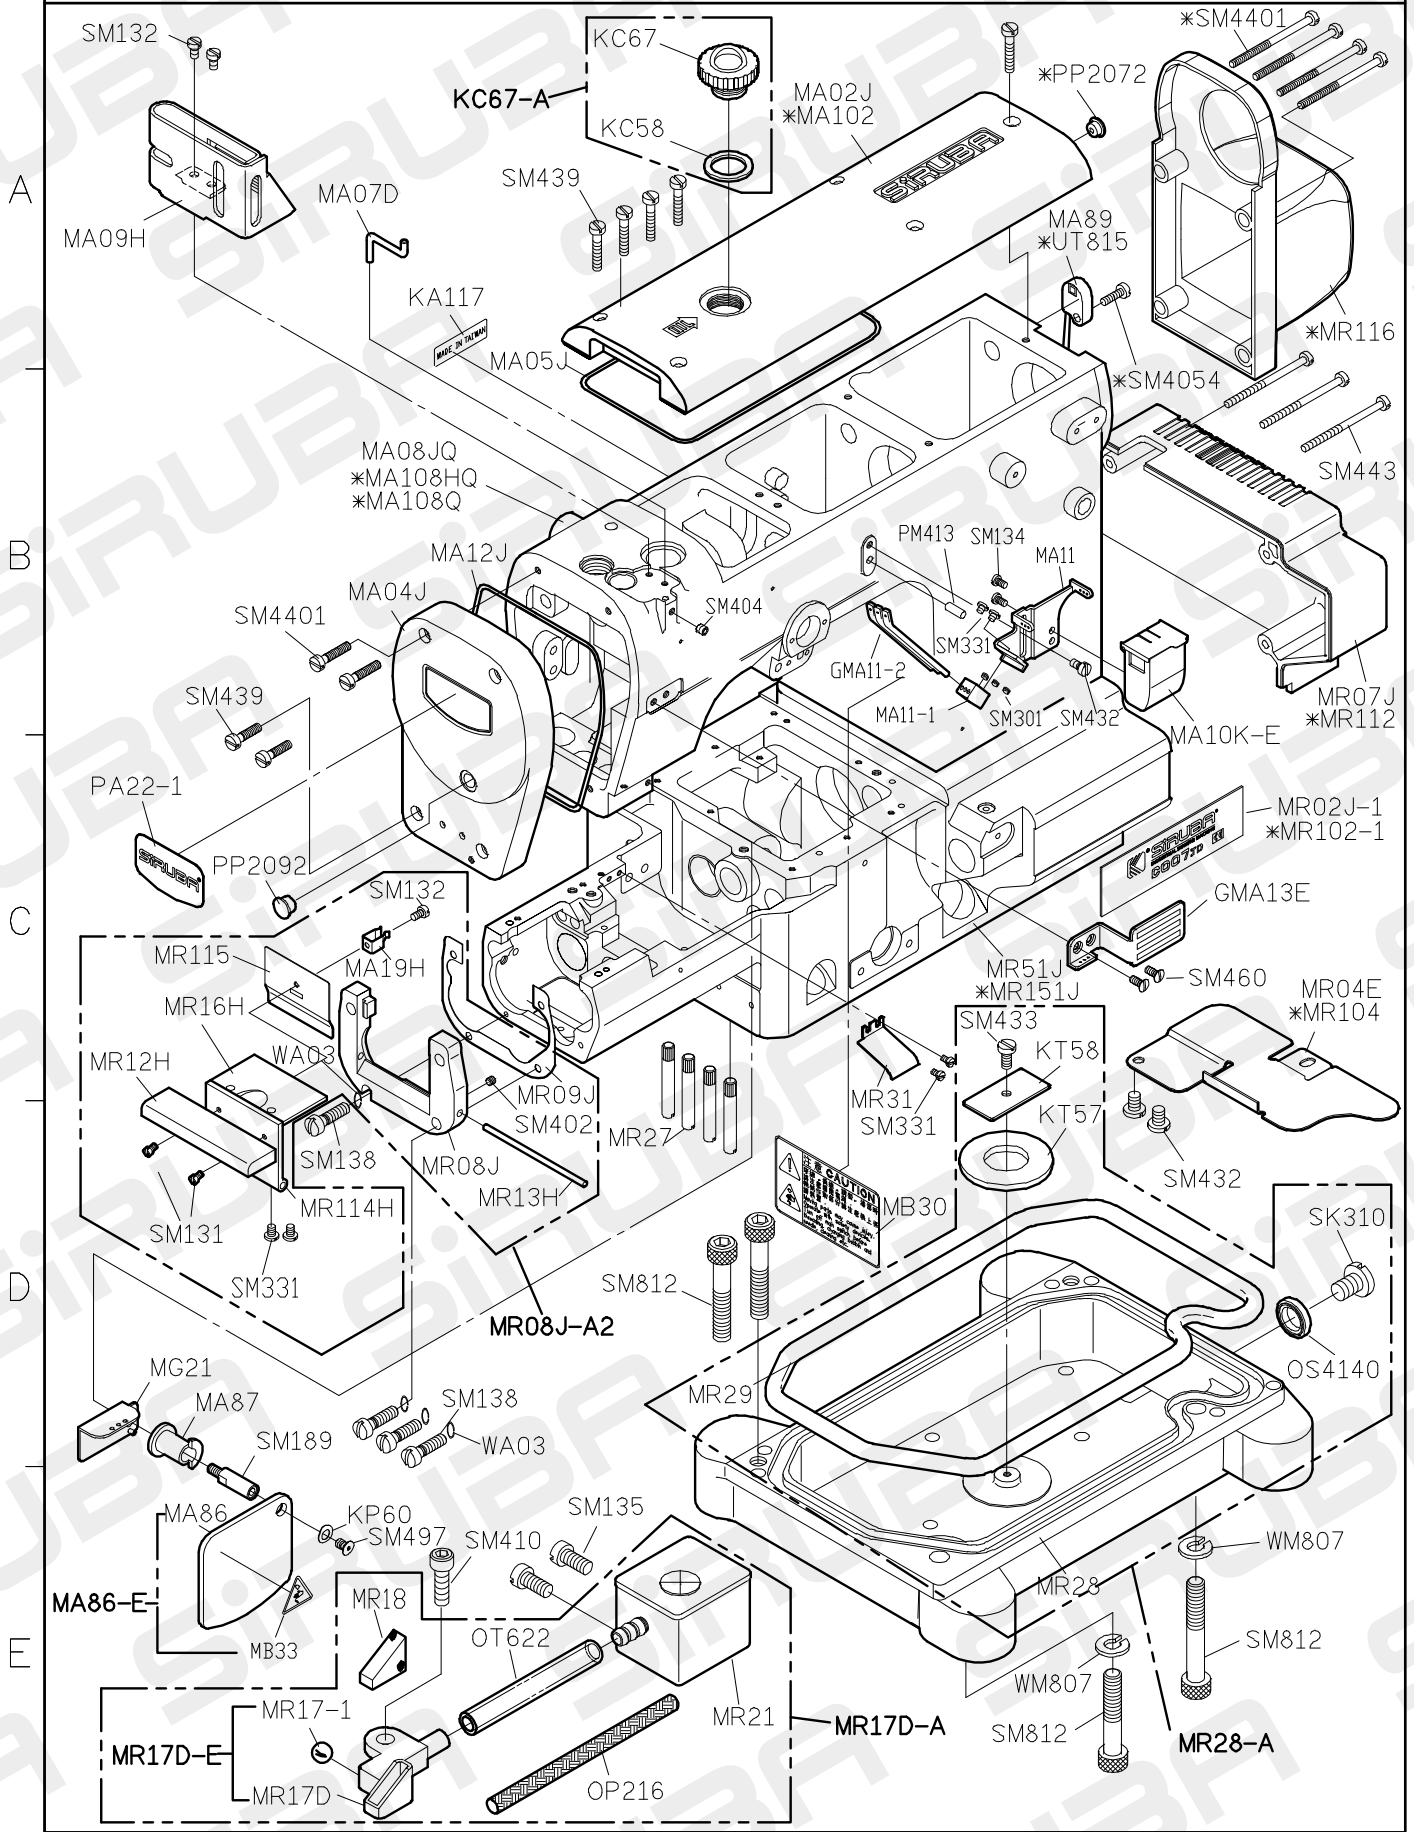C007JD PARTS LIST FOR MR-J GROUP P.1/1




FOR C007J/C007JD/C858J/C858JD
 *USE FOR C007JD/C858JD

11/02/21

C007JD PARTS LIST FOR MS GROUP P.1/1


FOR C007J

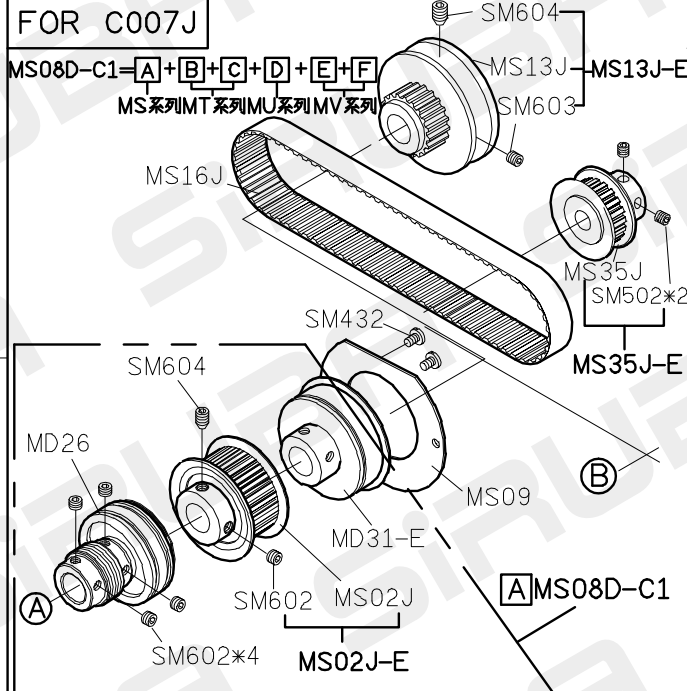MS08D-C1 = [A] + [B] + [C] + [D] + [E] + [F]
MS系列 MT系列 MU系列 MV系列




FOR C007JD

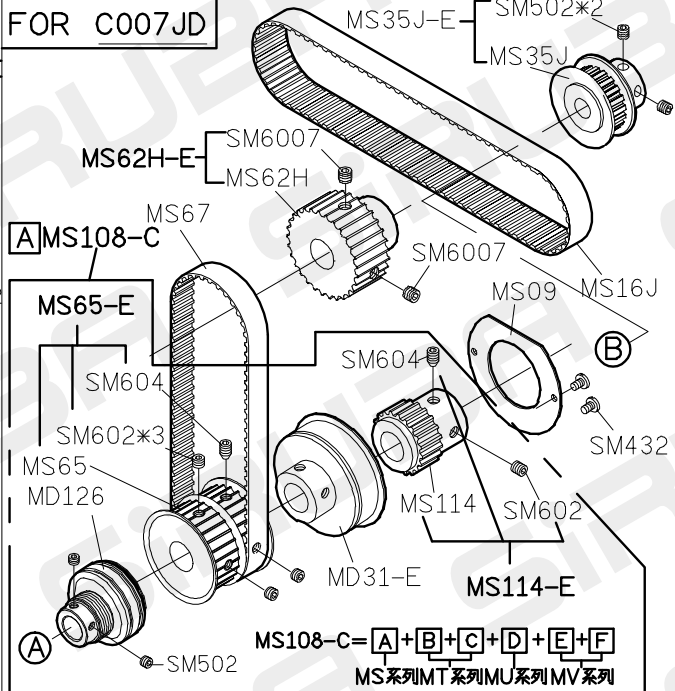
MS108-C = [A] + [B] + [C] + [D] + [E] + [F]
MS系列 MT系列 MU系列 MV系列



MS108-A = [A] + [B]
MS系列 MT系列

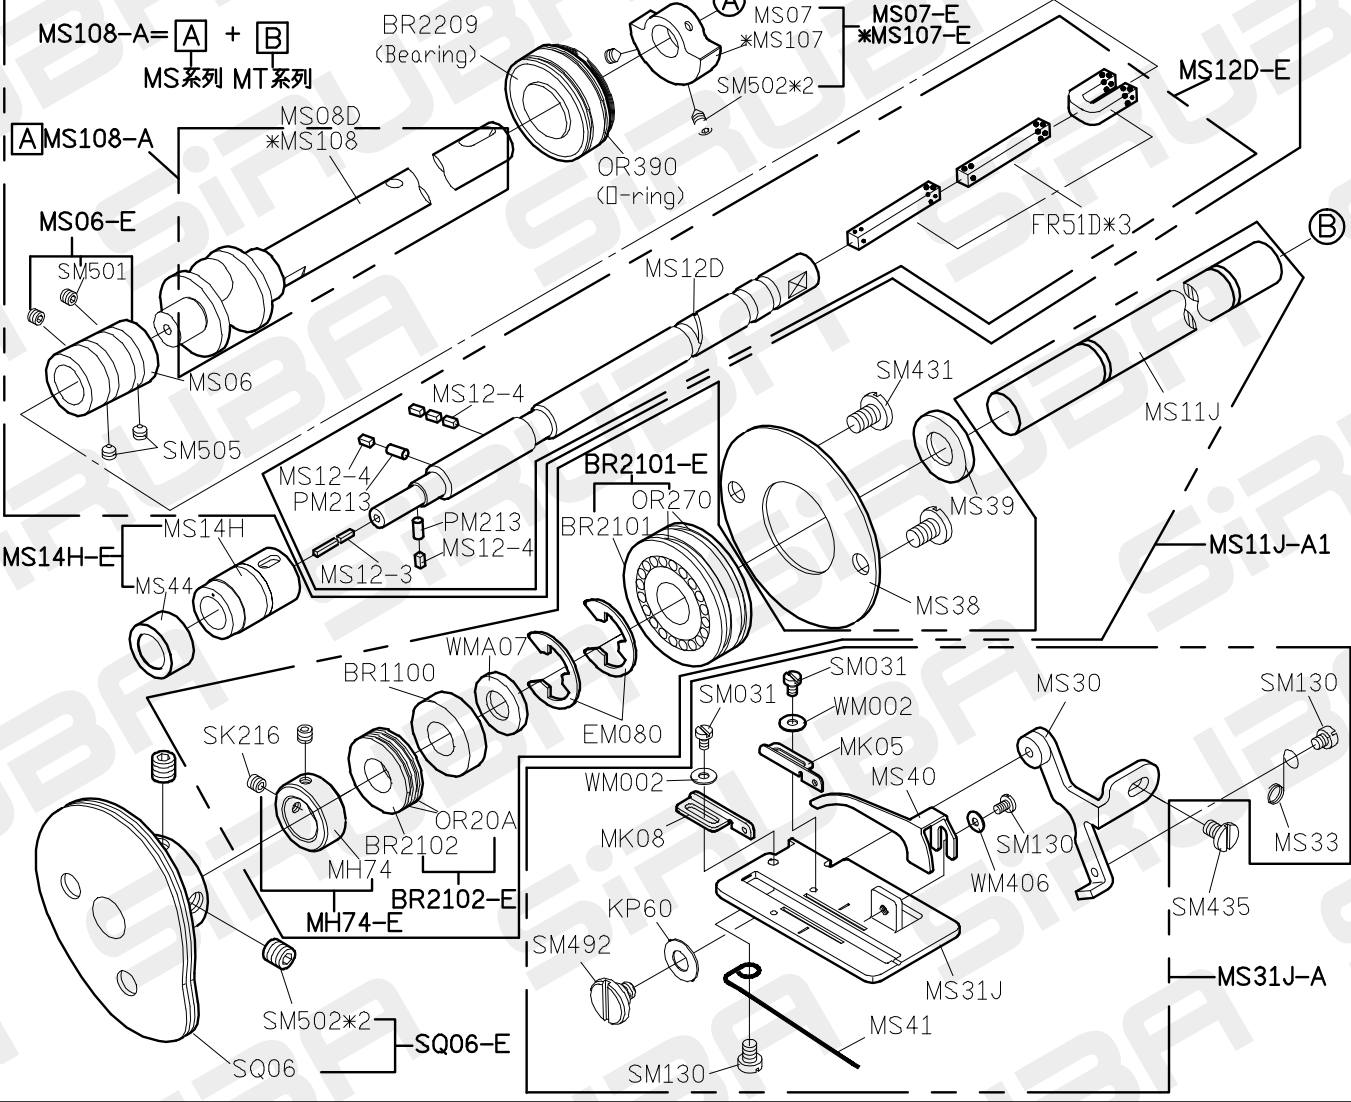

C007JD PARTS LIST FOR MT GROUP P.1/1

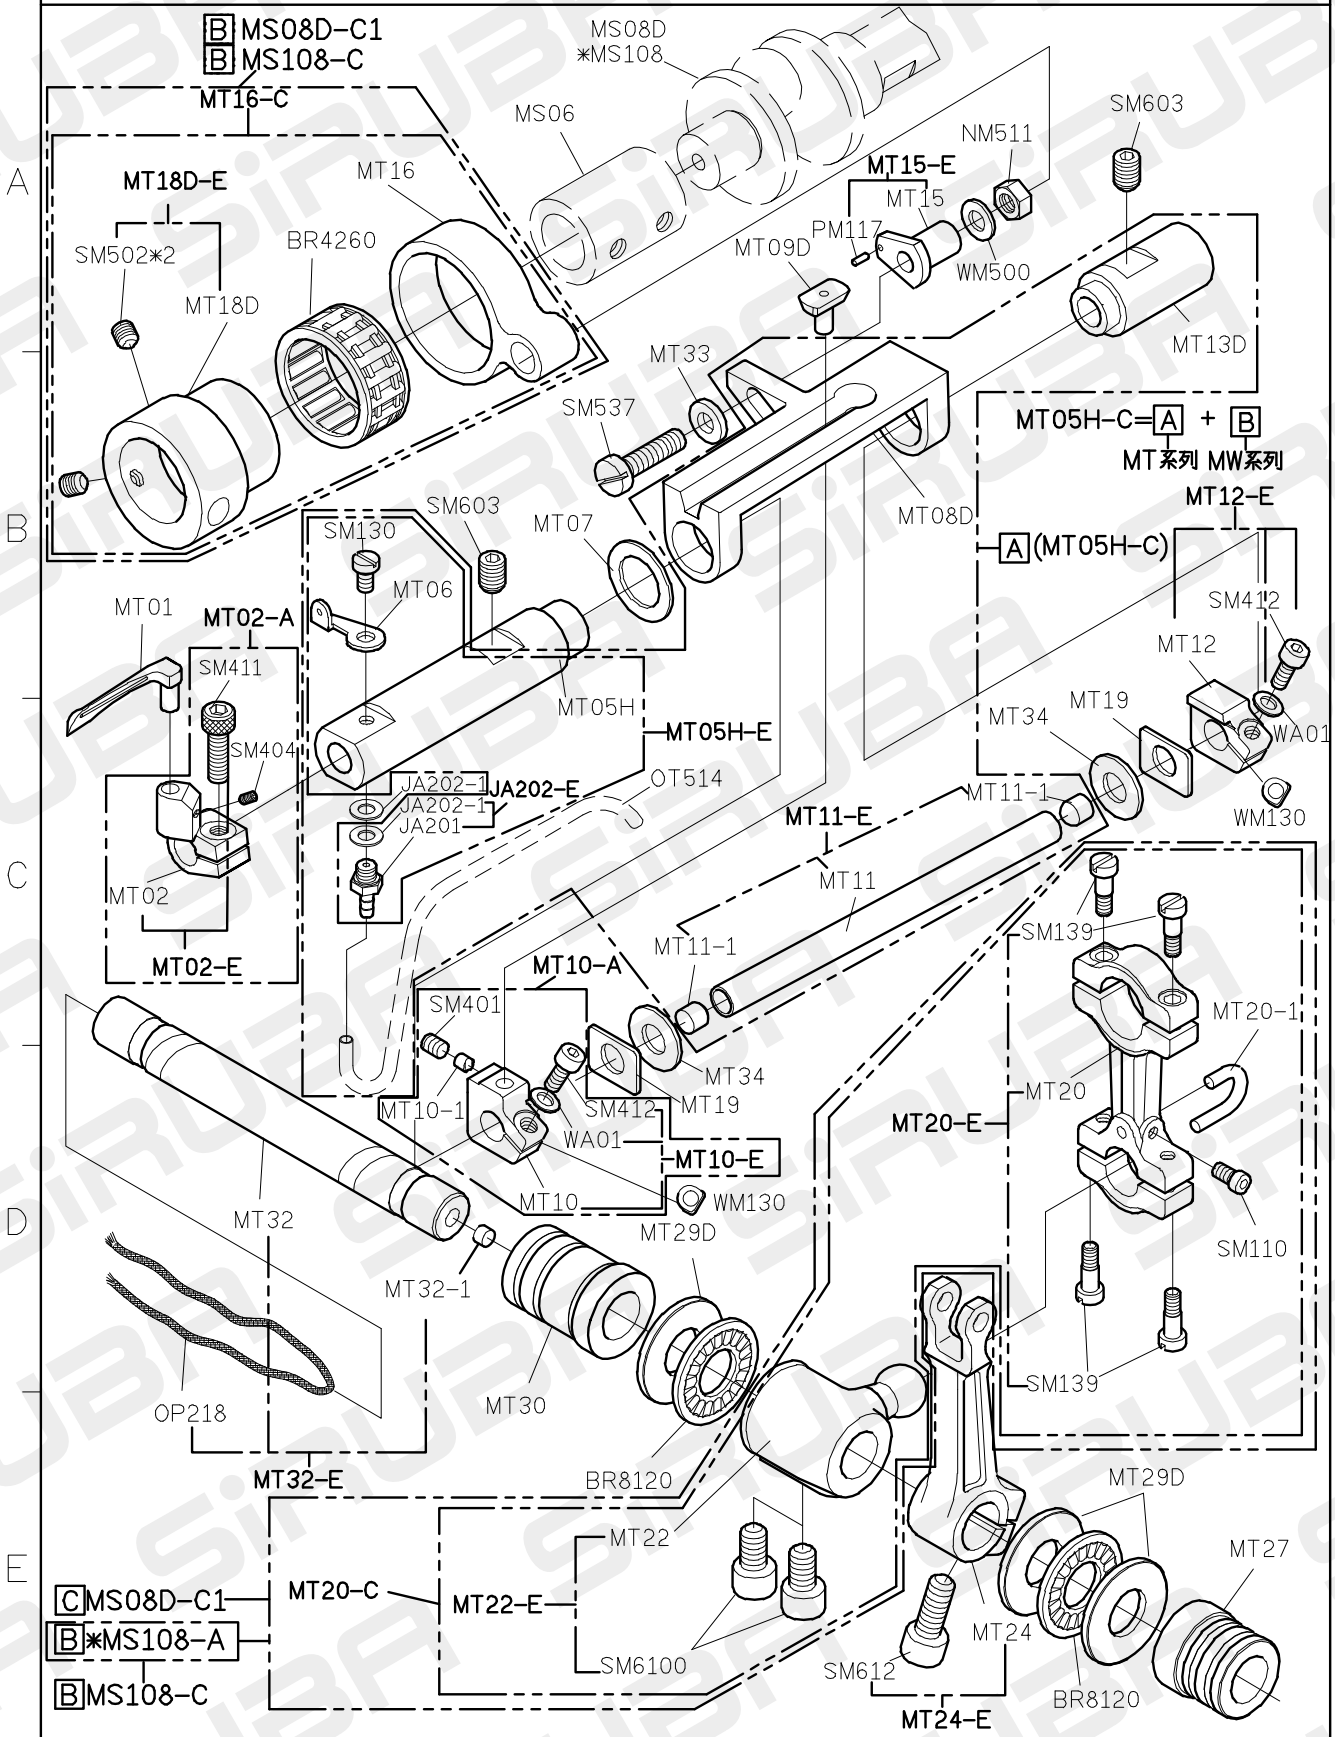


[B] MS08D-C1
[B] MS108-C

MS08D
*MS108


MT05H-C=[A]+[B]
MT系列 MW系列

FOR C007J/C007JD/C858J/C858JD
*USE FOR C007JD/C858JD

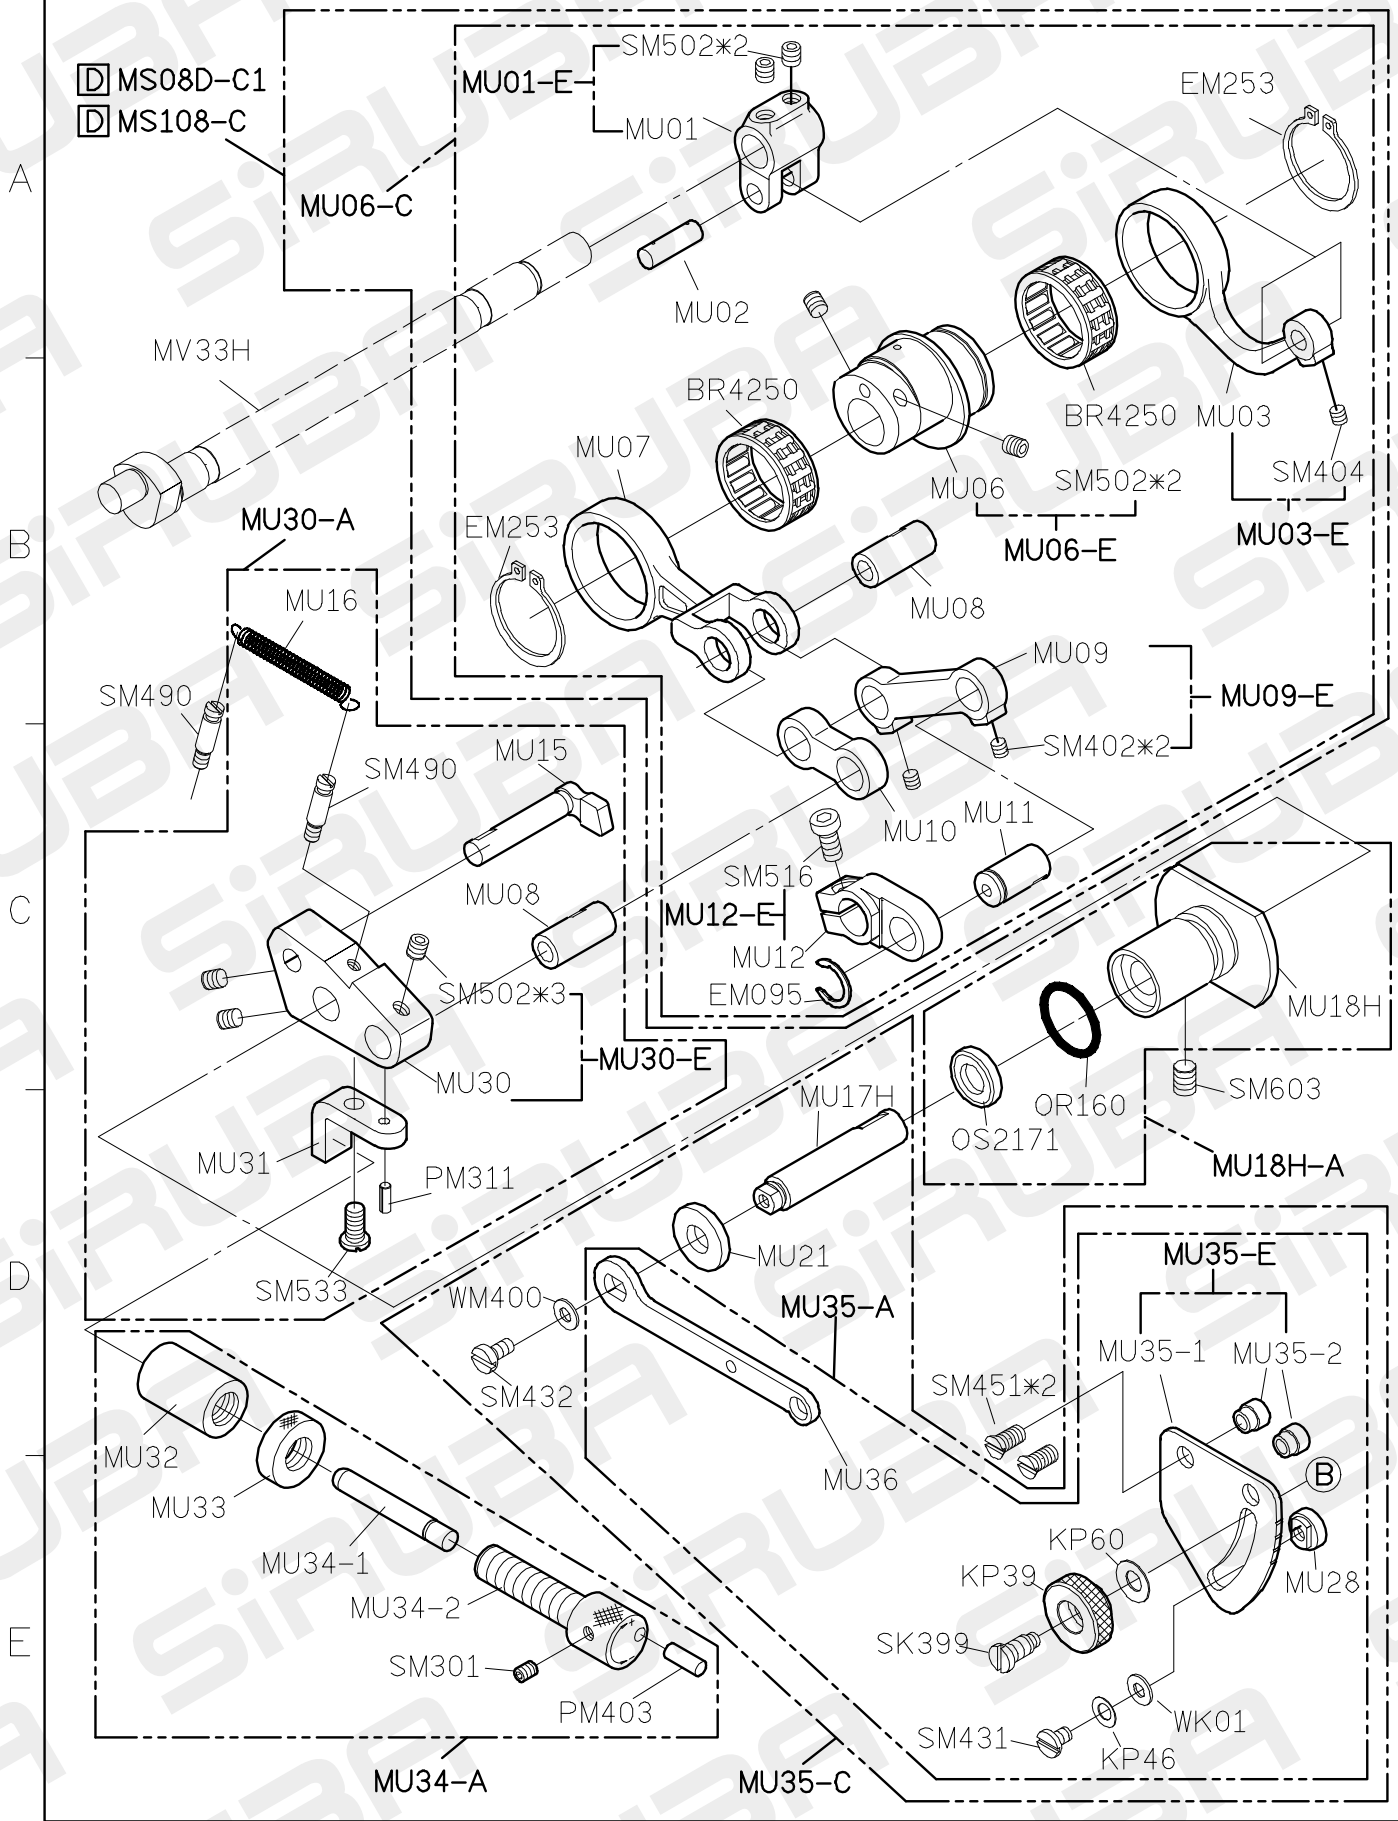C007JD PARTS LIST FOR MU GROUP P.1/1



C007JD PARTS LIST FOR MV GROUP P.1/1

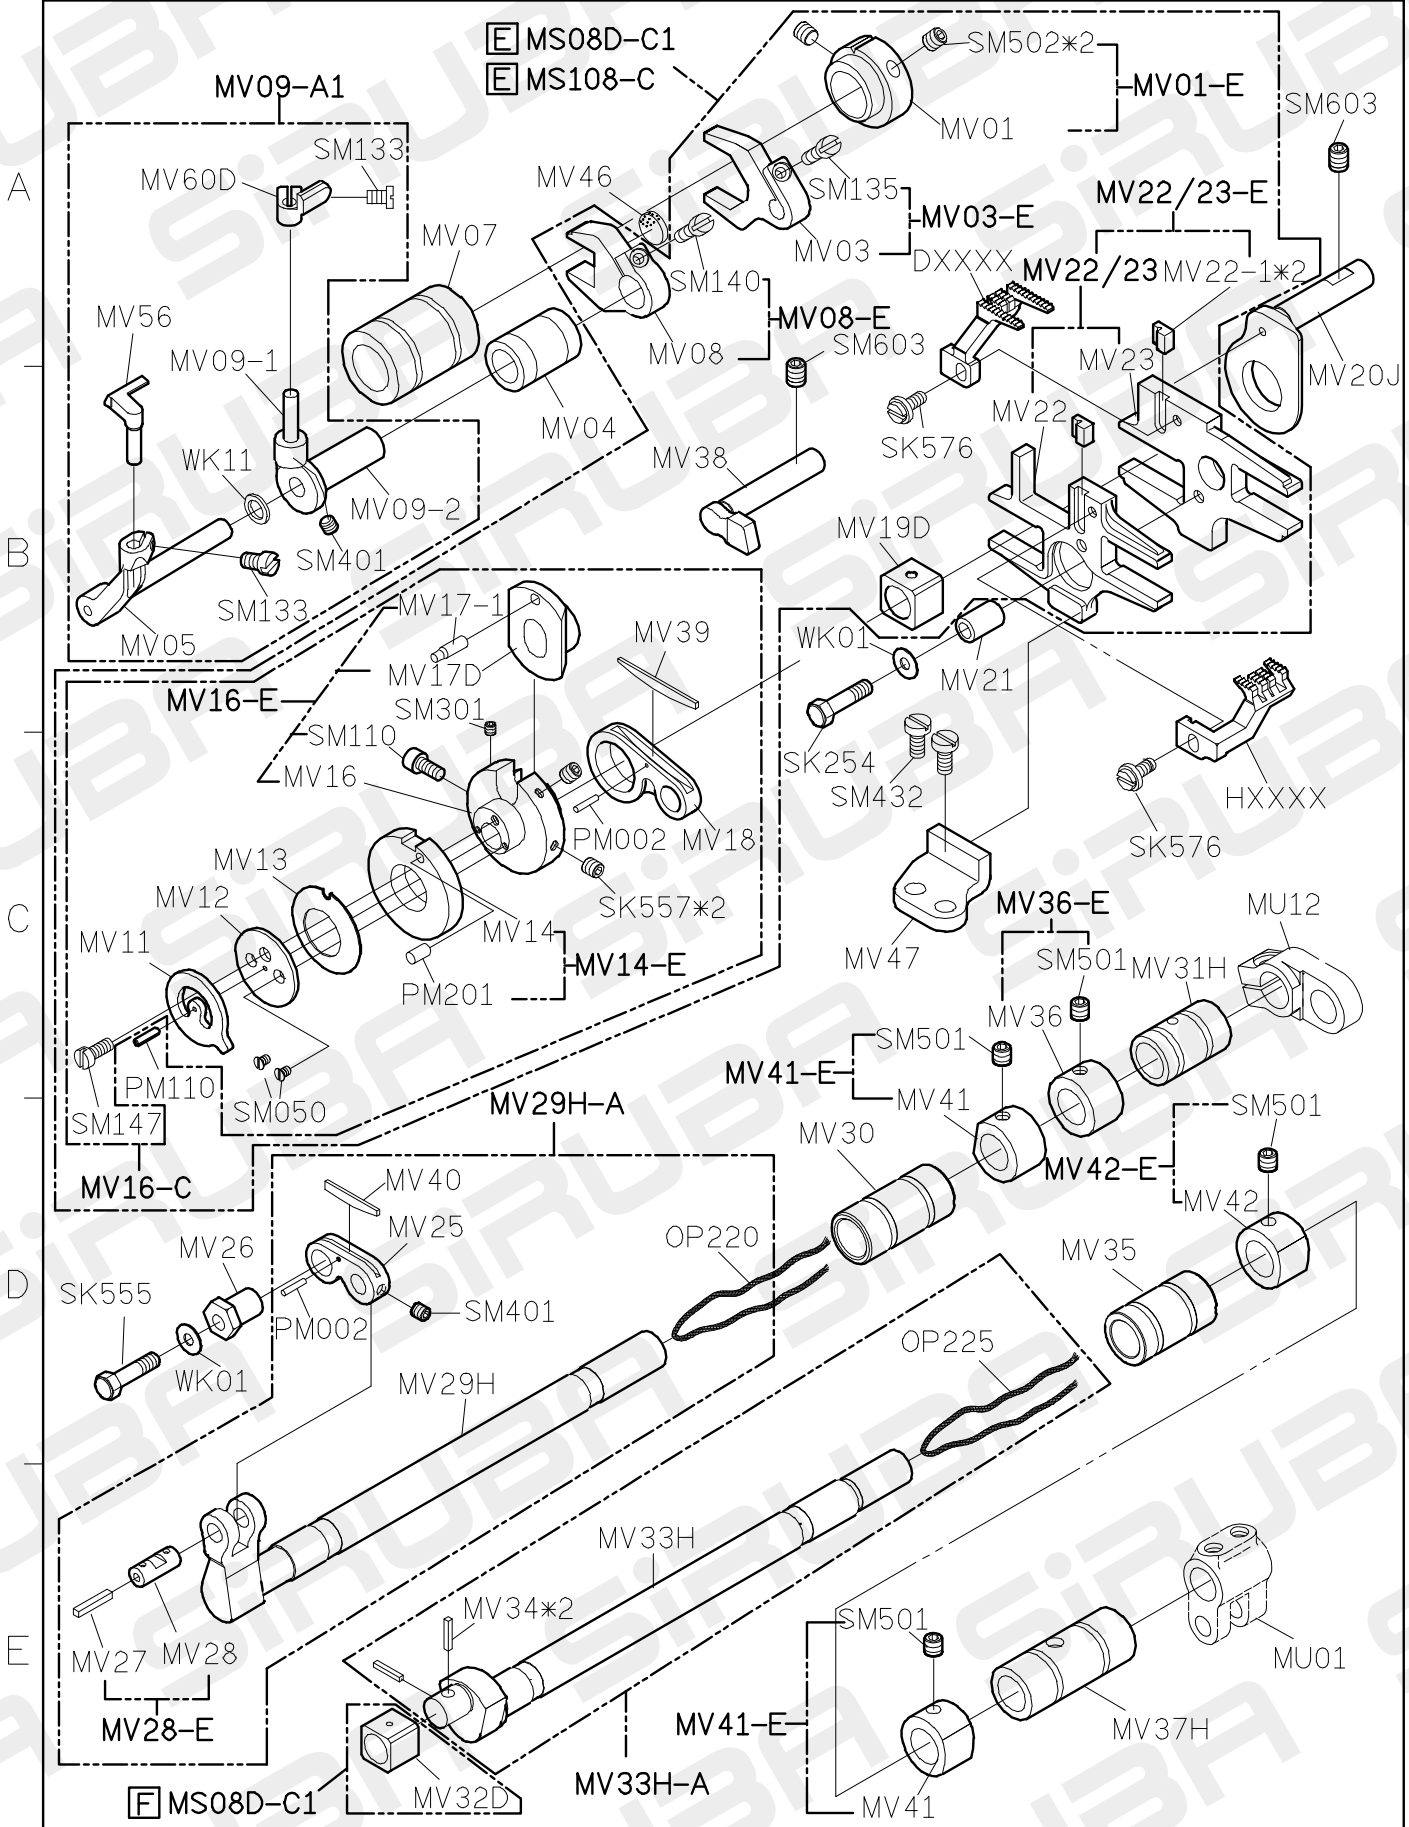

C007JD PARTS LIST FOR MW GROUP P.1/1

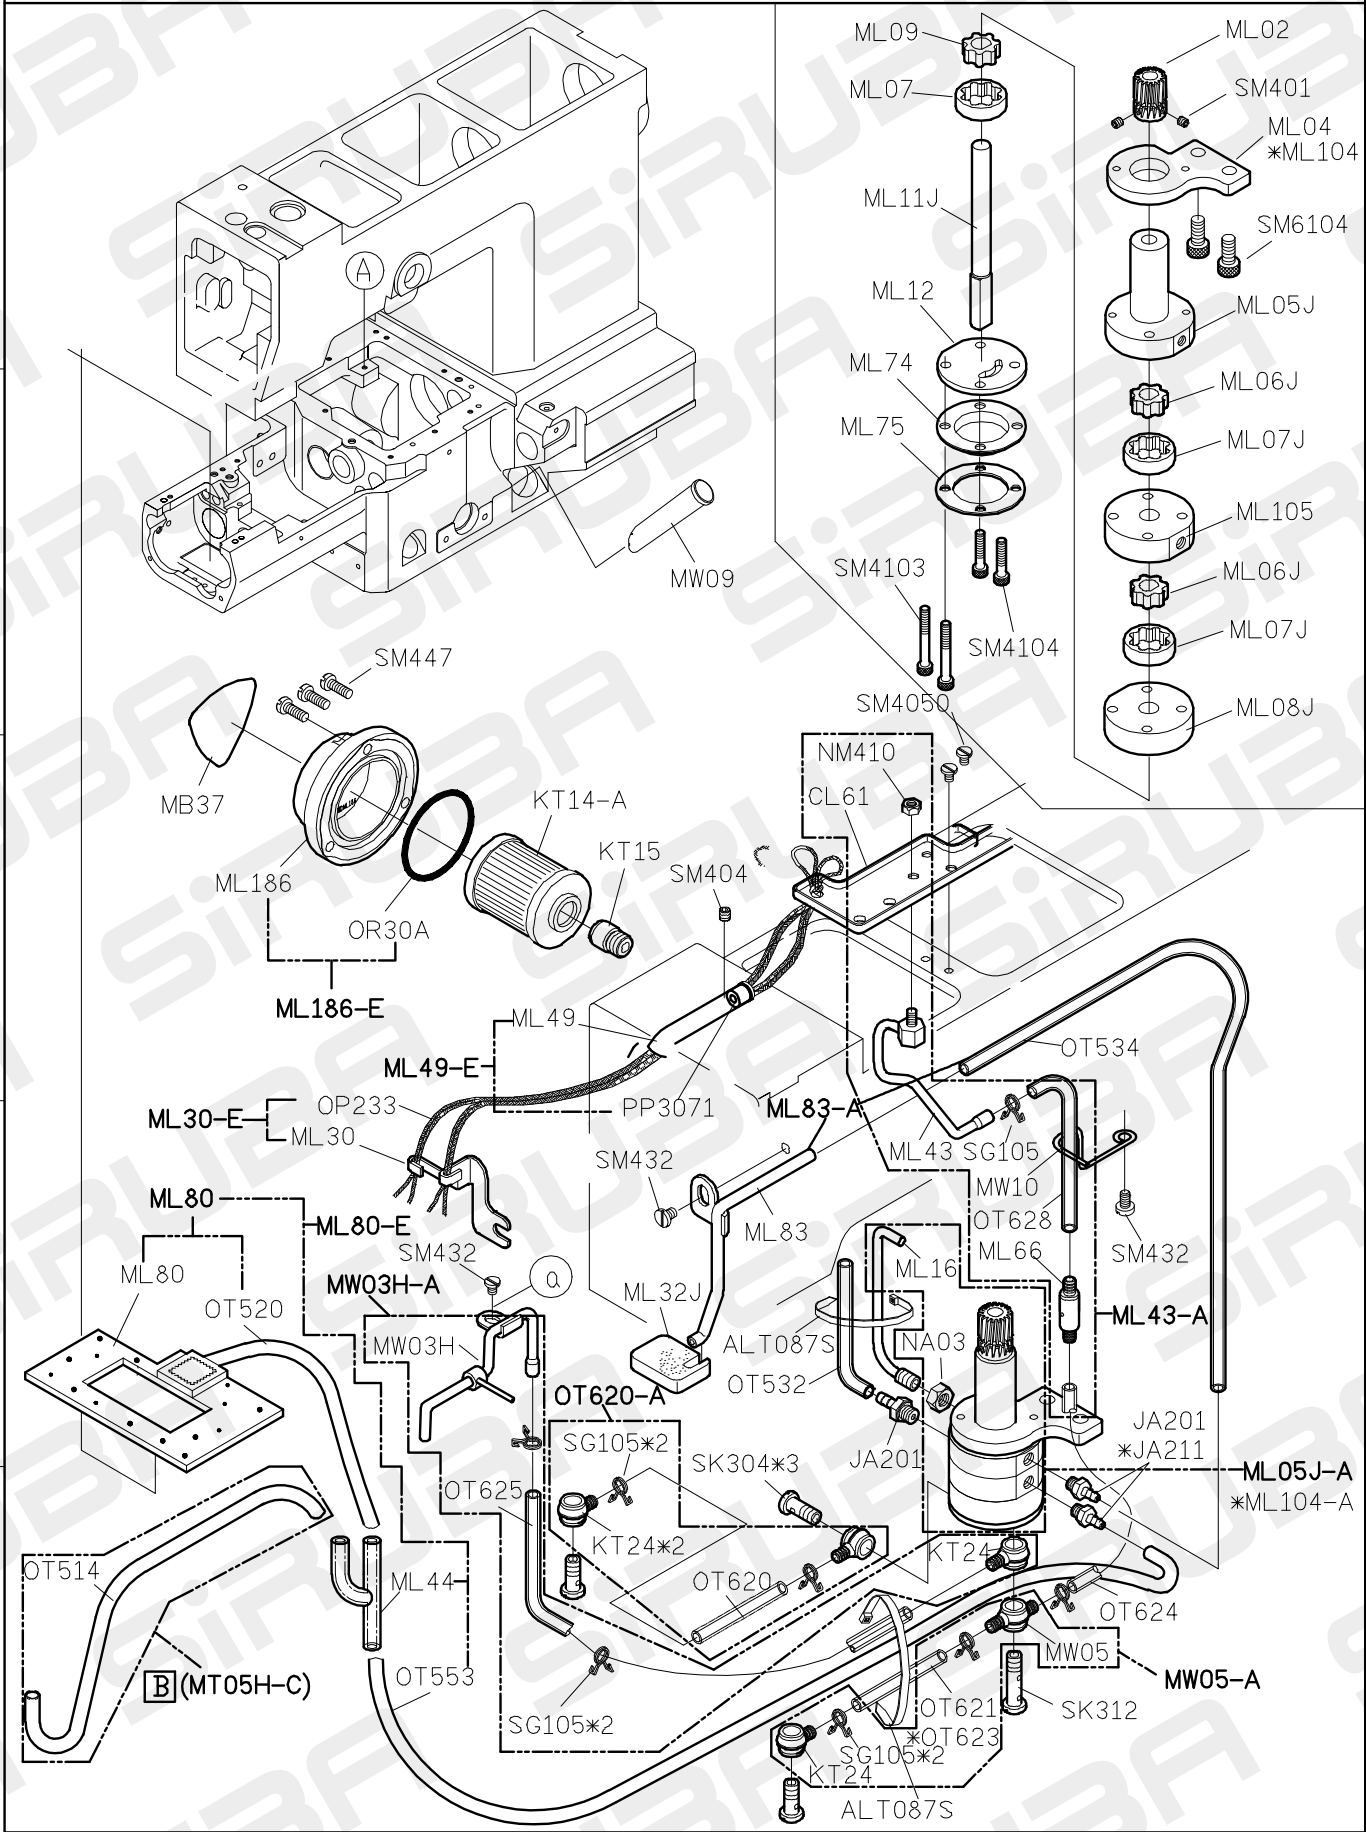
A

B

C


D

E



FOR C007J/C007JD/C858J/C858JD
 *USE FOR C007JD/C858JD

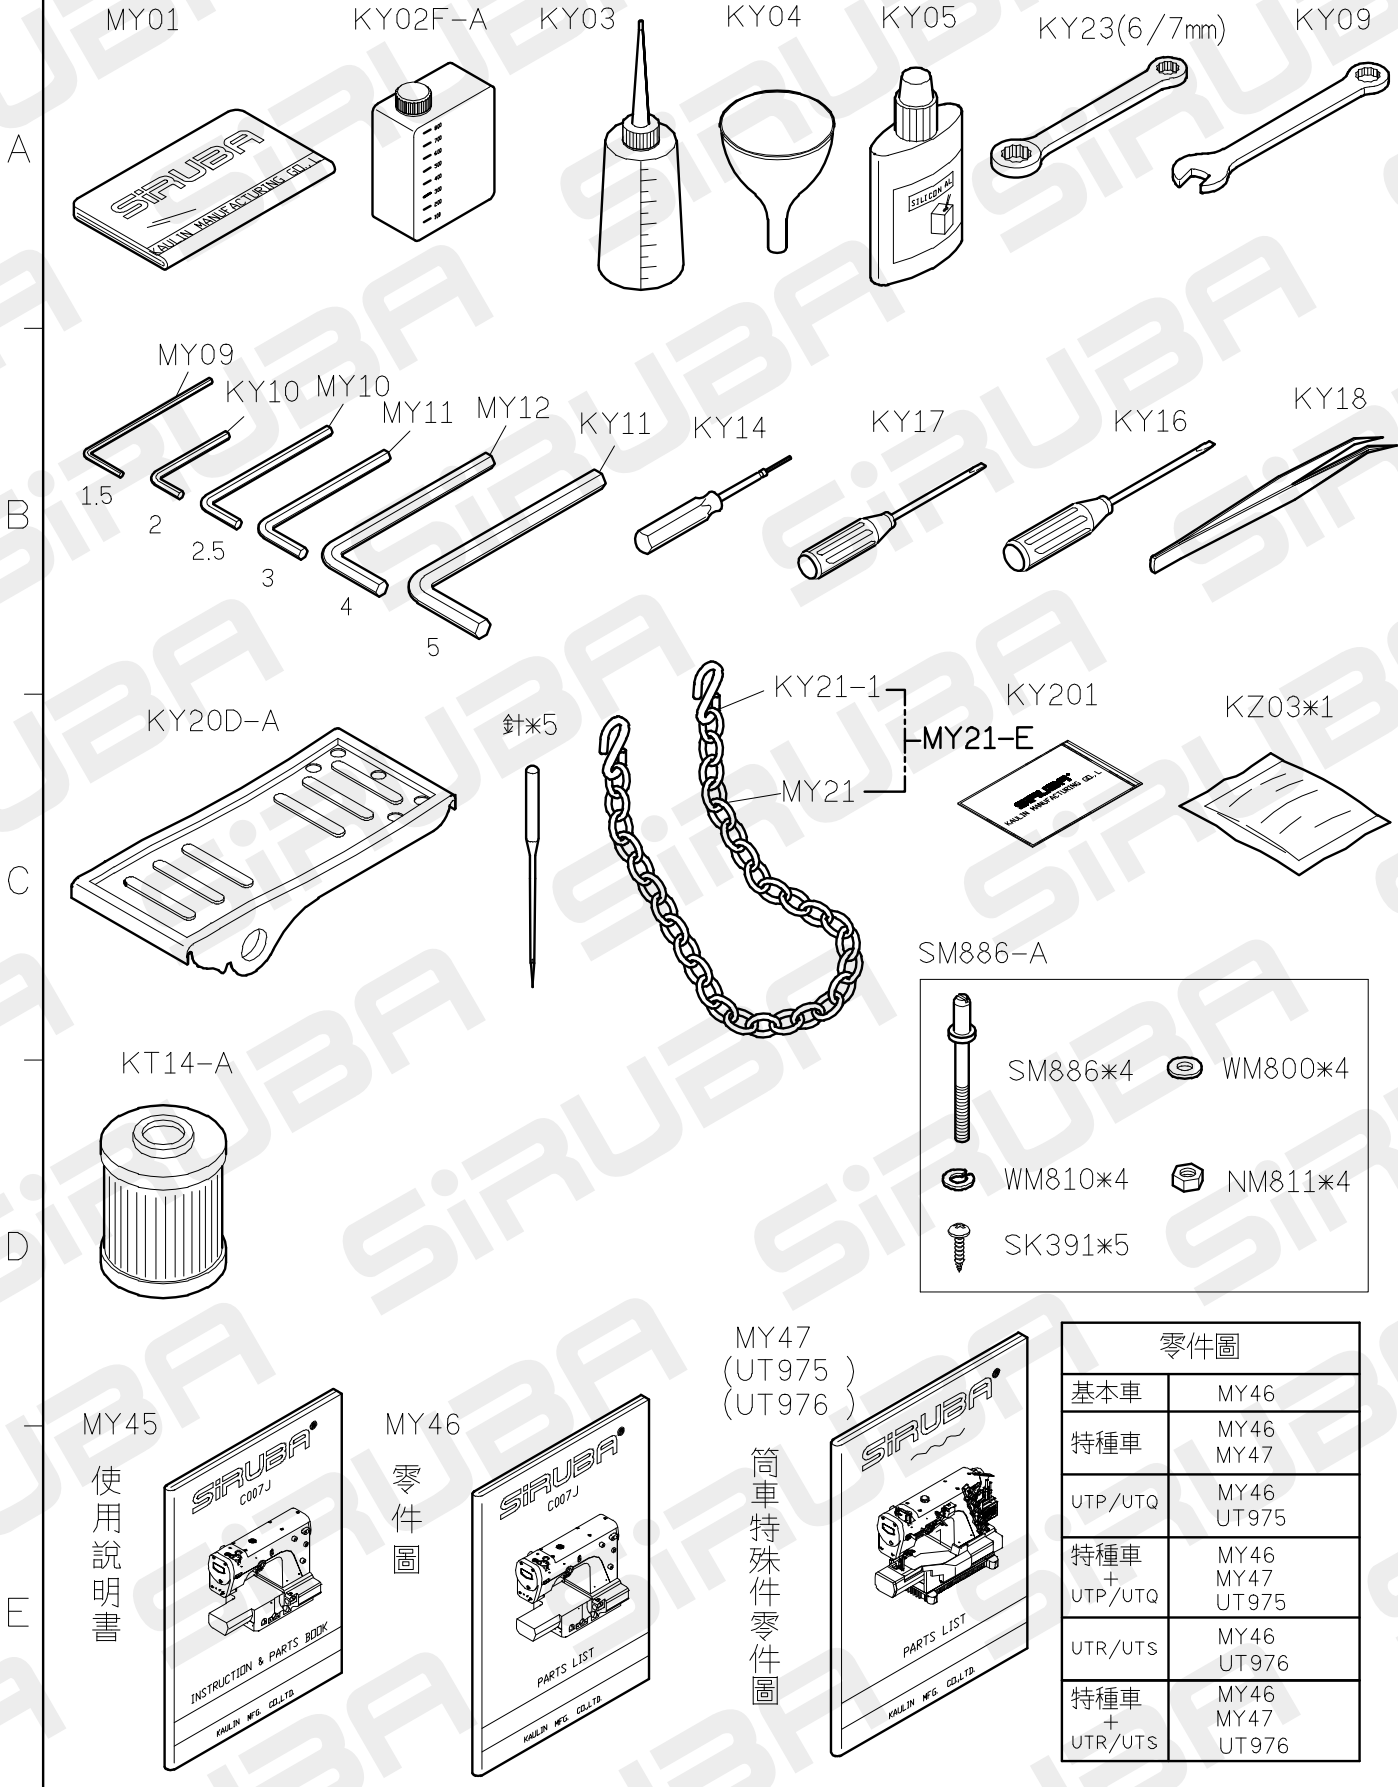
C007JD PARTS LIST FOR MY GROUP P.1/1



零件圖

基本車	MY46
特種車	MY46 MY47
UTP/UTQ	MY46 UT975
特種車 + UTP/UTQ	MY46 MY47 UT975
UTR/UTS	MY46 UT976
特種車 + UTR/UTS	MY46 MY47 UT976

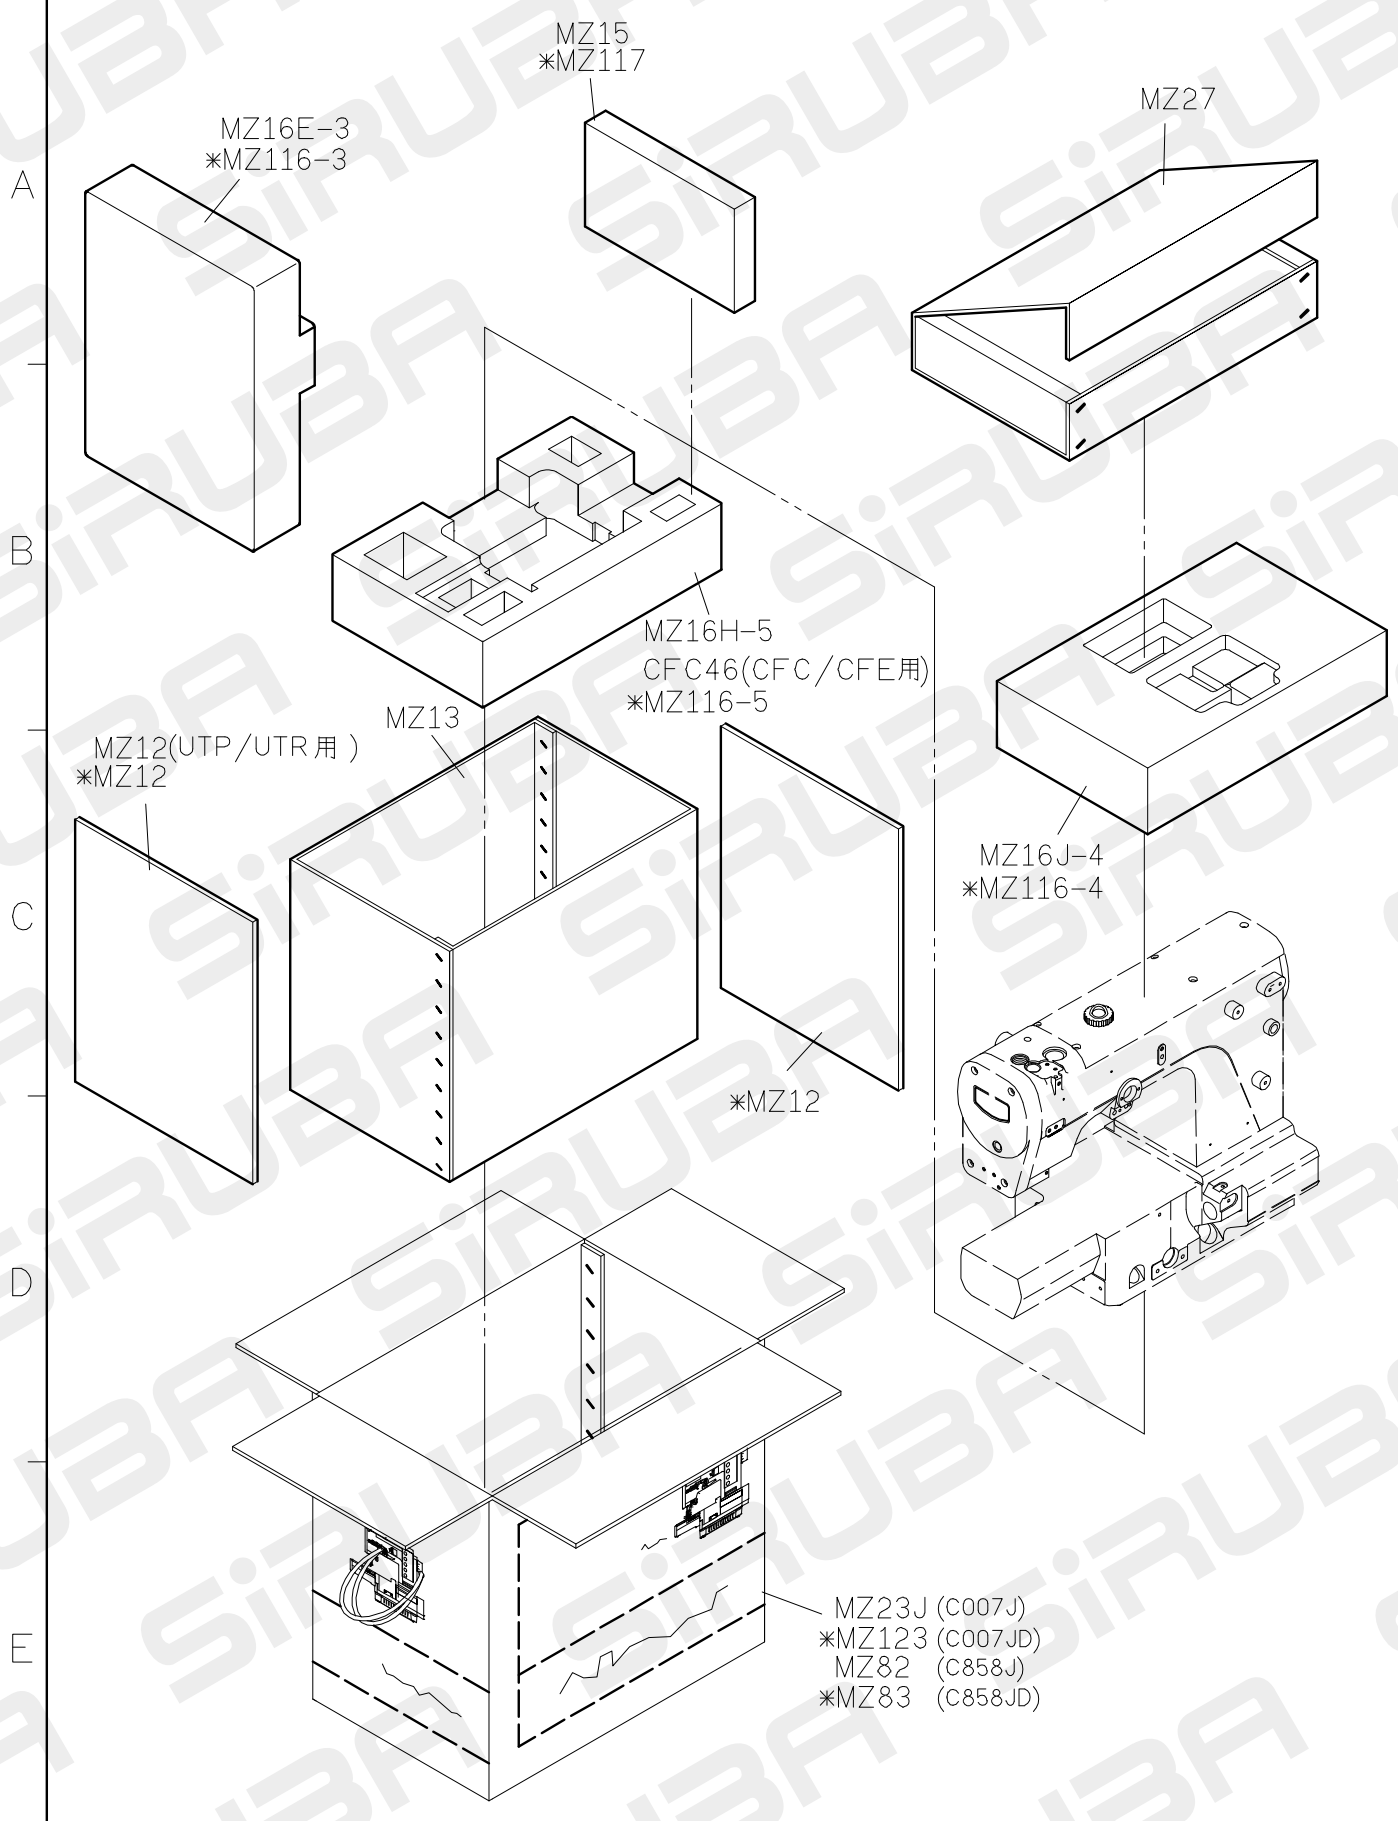C007JD PARTS LIST FOR MZ GROUP P.1/1



MZ15
*MZ117

MZ16E-3
*MZ116-3

MZ27

MZ16H-5
CFC46(CFC/CFE用)
*MZ116-5

MZ12(UTP/UTR用)
*MZ12

MZ13

MZ16J-4
*MZ116-4

*MZ12

MZ23J (C007J)
*MZ123 (C007JD)
MZ82 (C858J)
*MZ83 (C858JD)

TABLE CUT-OUT OF C007-T22

三針筒車下乘桌板圖

C007J SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR CRB

所有尺寸公差/DIFFERENCE:±2

C007-T22-1070長度(L):1070/重量:11.5kg±5%

C007-T22長度(L):1200/重量:12.5kg±5%

全封邊灰格紋光塑面台板

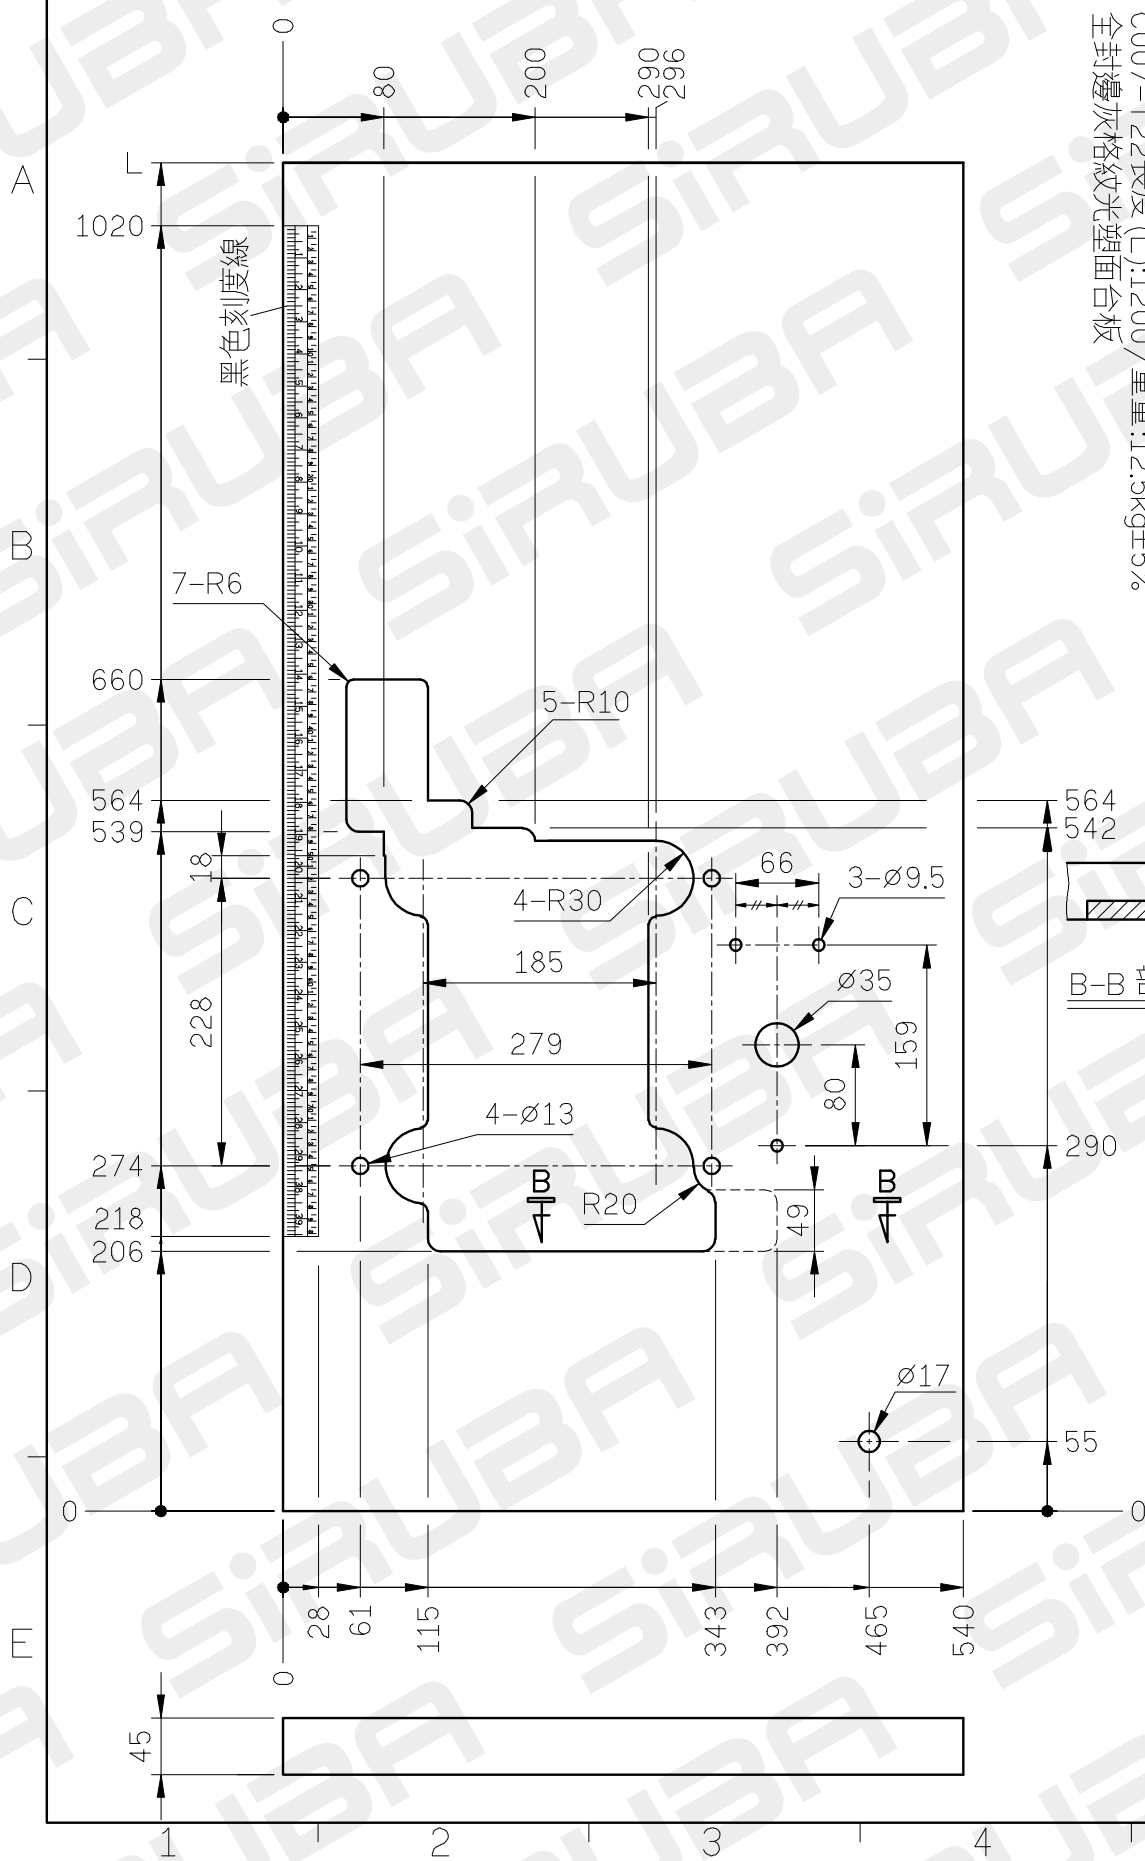


TABLE CUT-OUT OF C007-T23

三針筒車下乘桌板圖

C007J/C007JD/S007K/S007KD SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR 一般車及自動切線

所有尺寸公差/DIFFERENCE:±2

C007-T23-1070長度(L):1070/重量:11.5kg±5%

C007-T23長度(L):1200/重量:12.5kg±5%

全封邊灰格紋光塑面台板

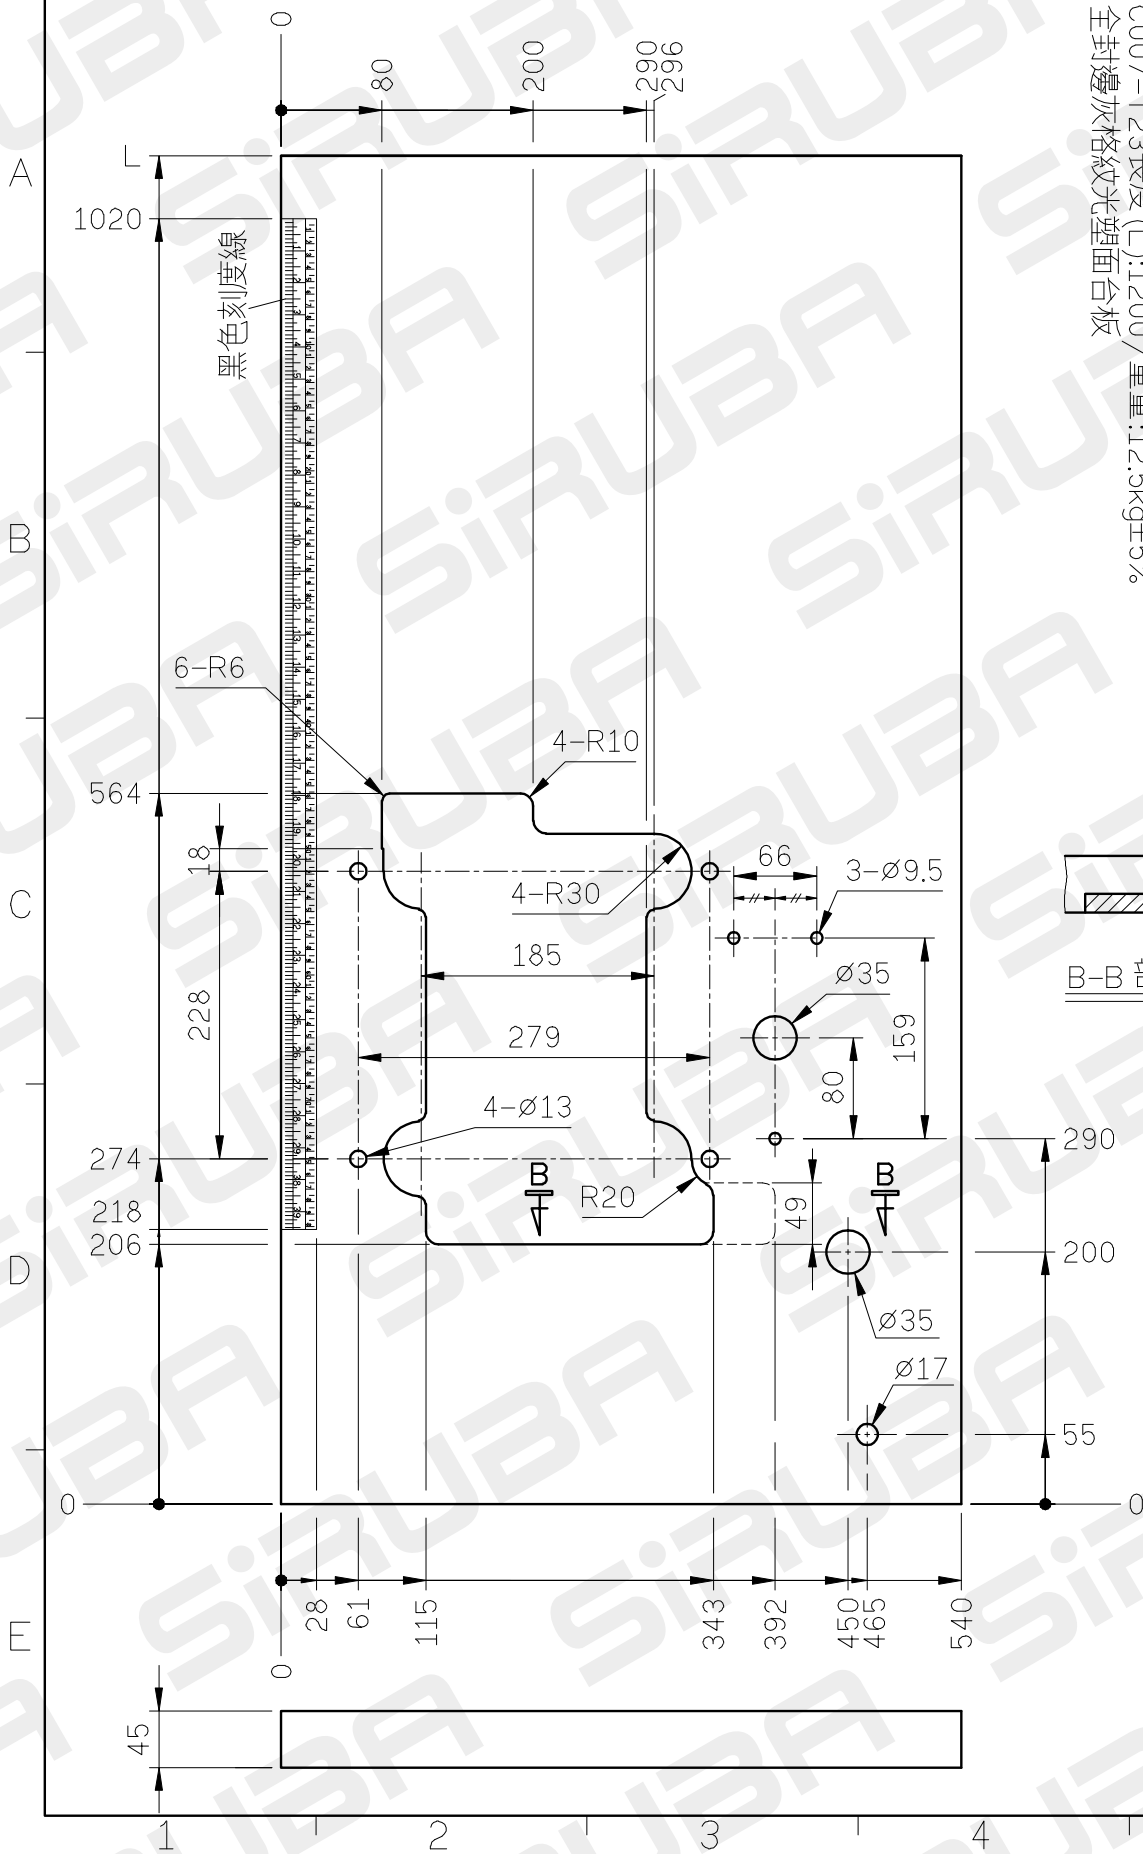


TABLE CUT-OUT OF C007-T24

三針筒車上乘桌板圖

C007J SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR 一般車及自動切線

所有尺寸公差/DIFFERENCE:±2

C007-T24-1070長度(L):1070/重量:11.3kg±5%

C007-T24長度(L):1200/重量:12.3kg±5%

全封邊灰格紋光塑面台板

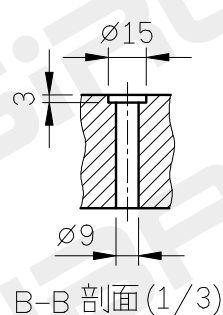
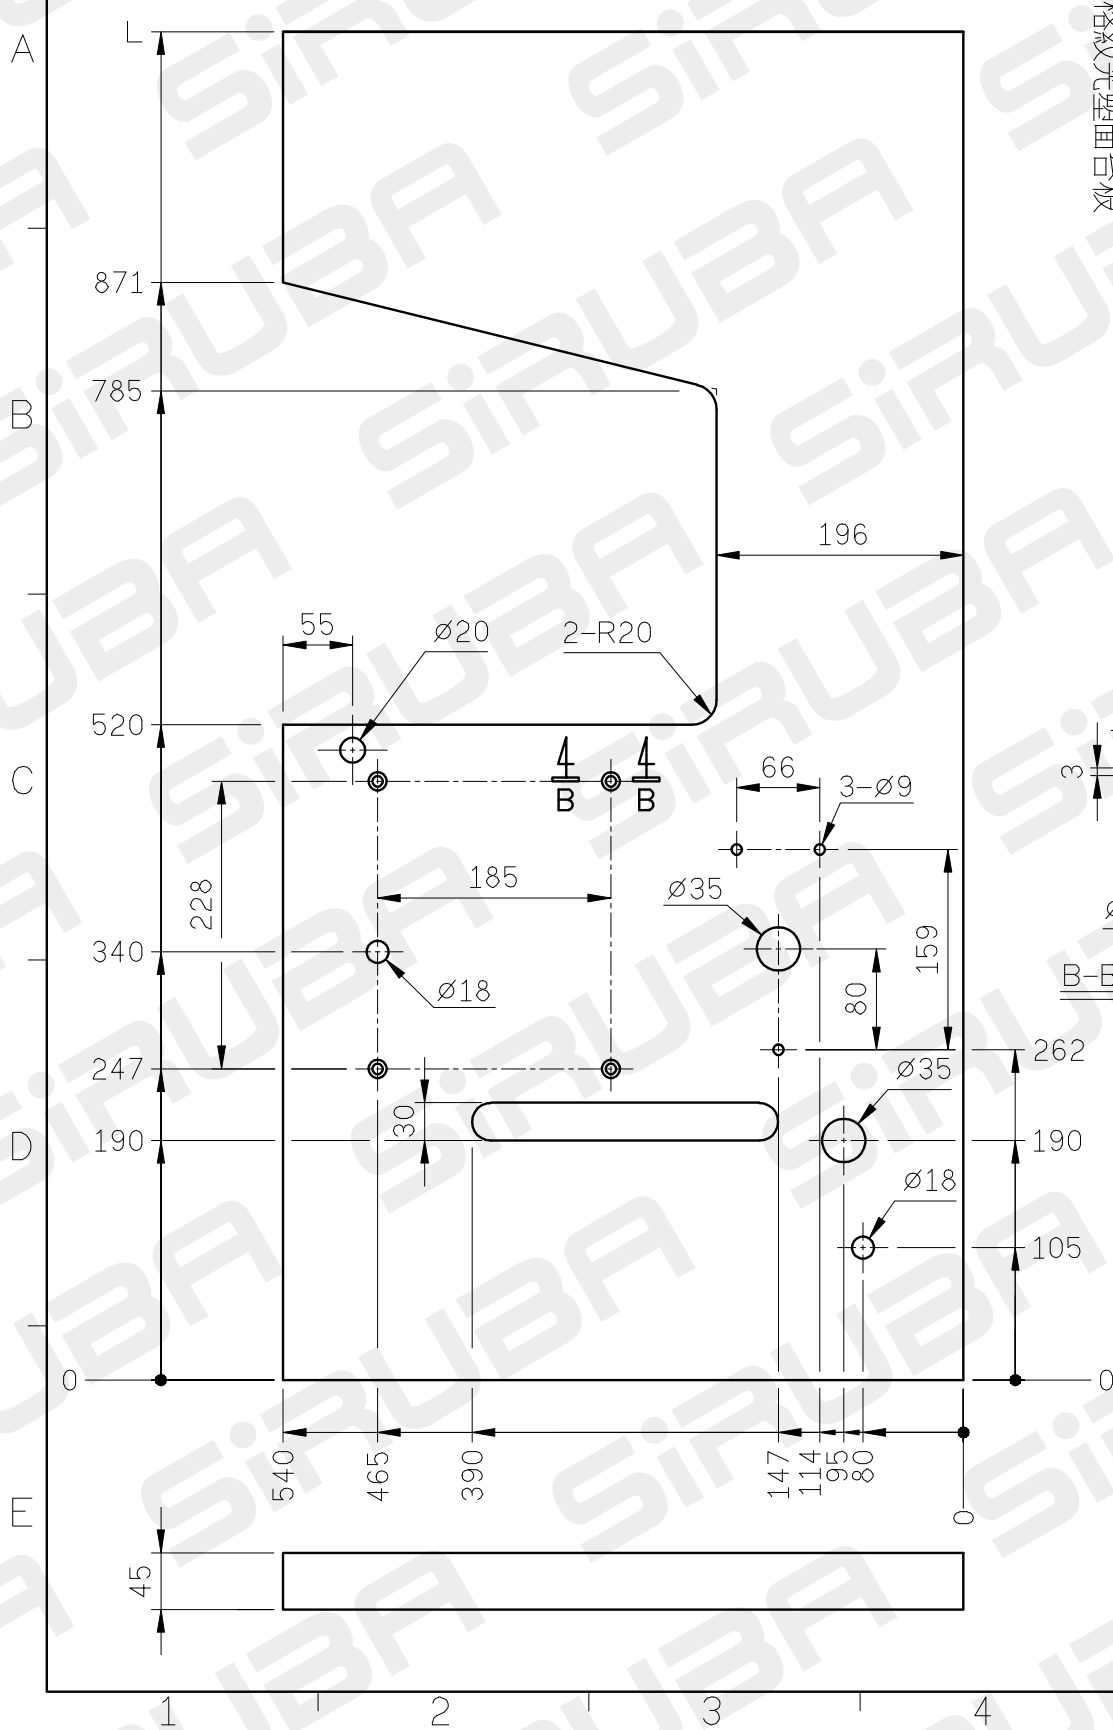


TABLE CUT-OUT OF C007-T25

三針筒車上乘桌板圖

C007J/C007JD/S007K/S007KD SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR CRL:CRL/UTP:Q

所有尺寸公差/DIFFERENCE:±2

C007-T25-1070長度(L):1070/重量:11.3kg±5%

C007-T25長度(L):1200/重量:12.3kg±5%

全封邊灰格紋光塑面台板

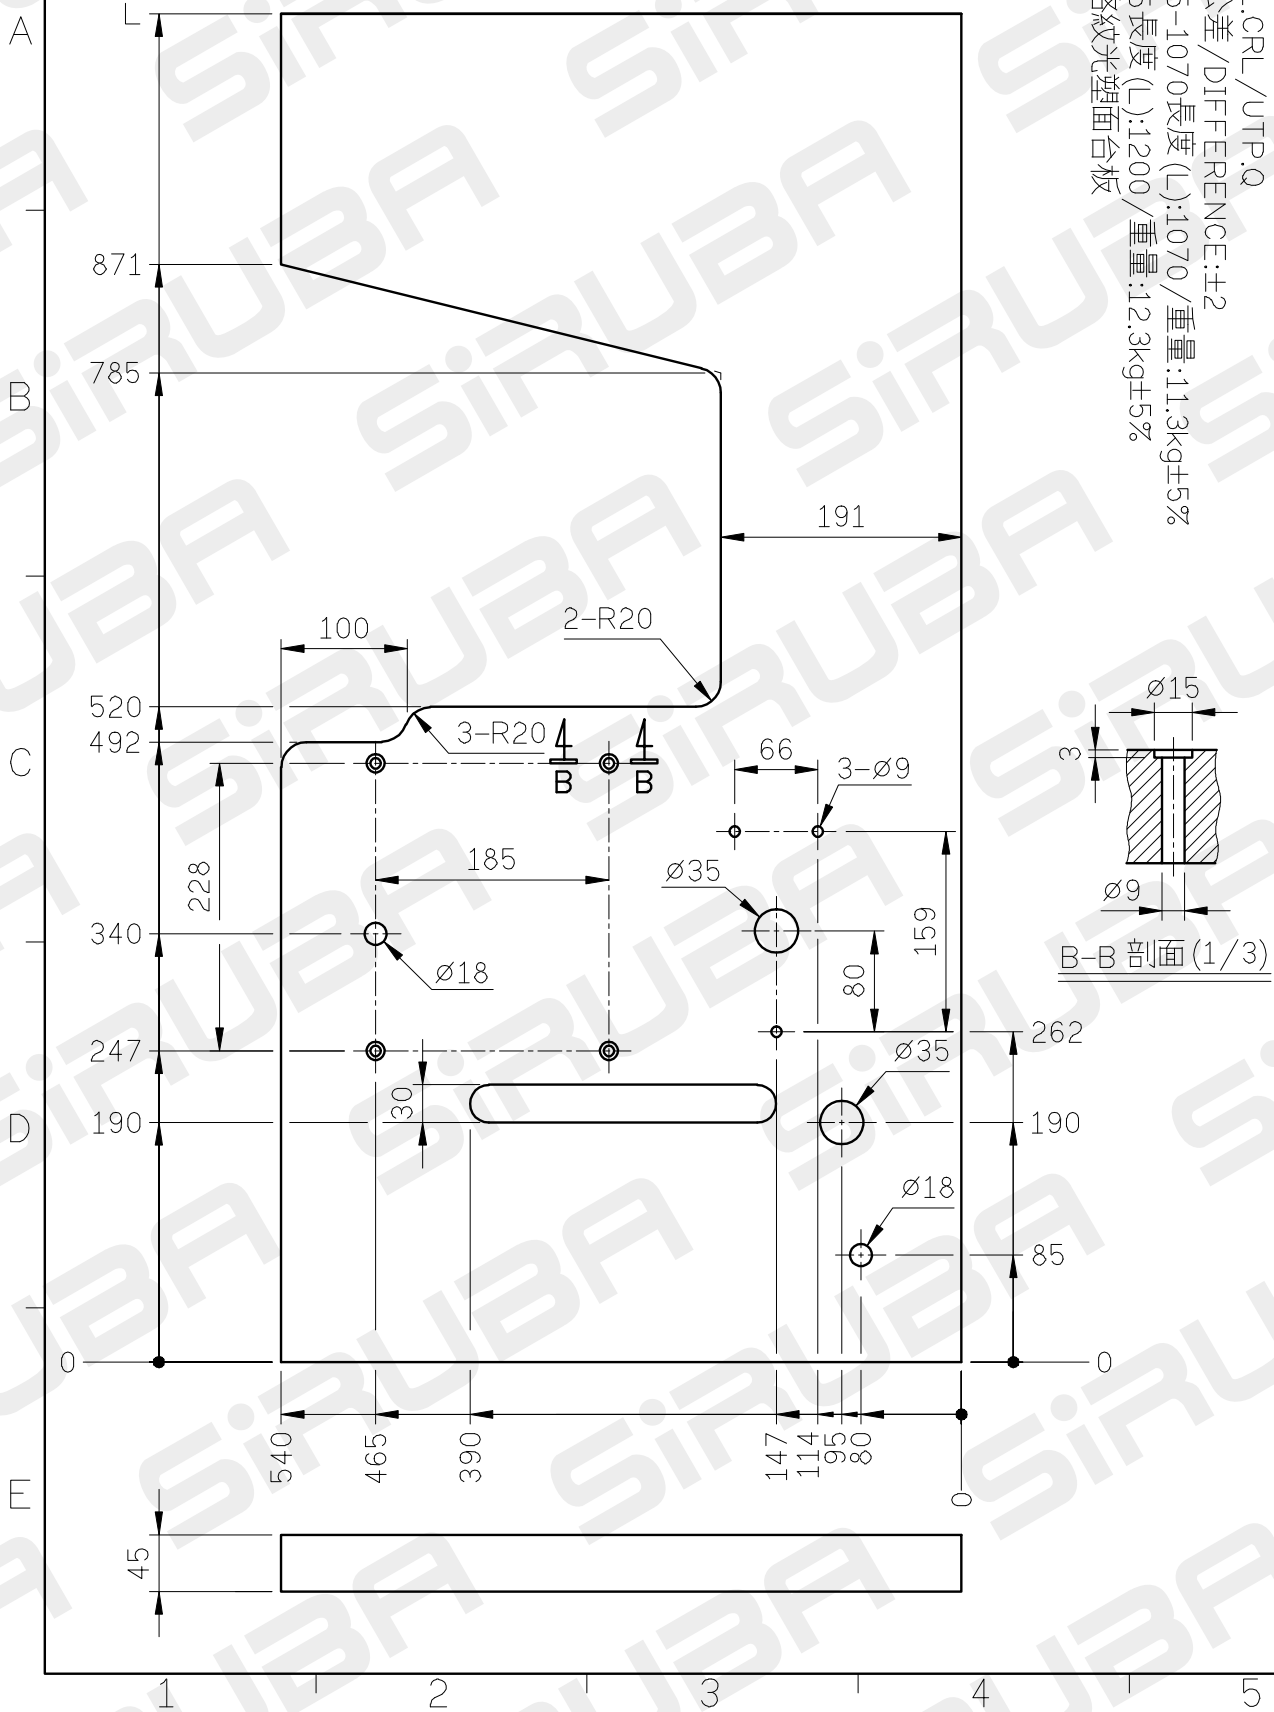


TABLE CUT-OUT OF C007-T26

三針筒車下乘桌板圖

C007J SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR CFC/CFE

所有尺寸公差/DIFFERENCE:±2

C007-T26-1070長度(L):1070/重量:11.4kg±5%

C007-T26長度(L):1200/重量:12.4kg±5%

全封邊灰格紋光塑面台板

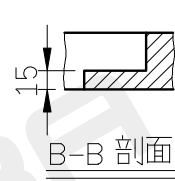
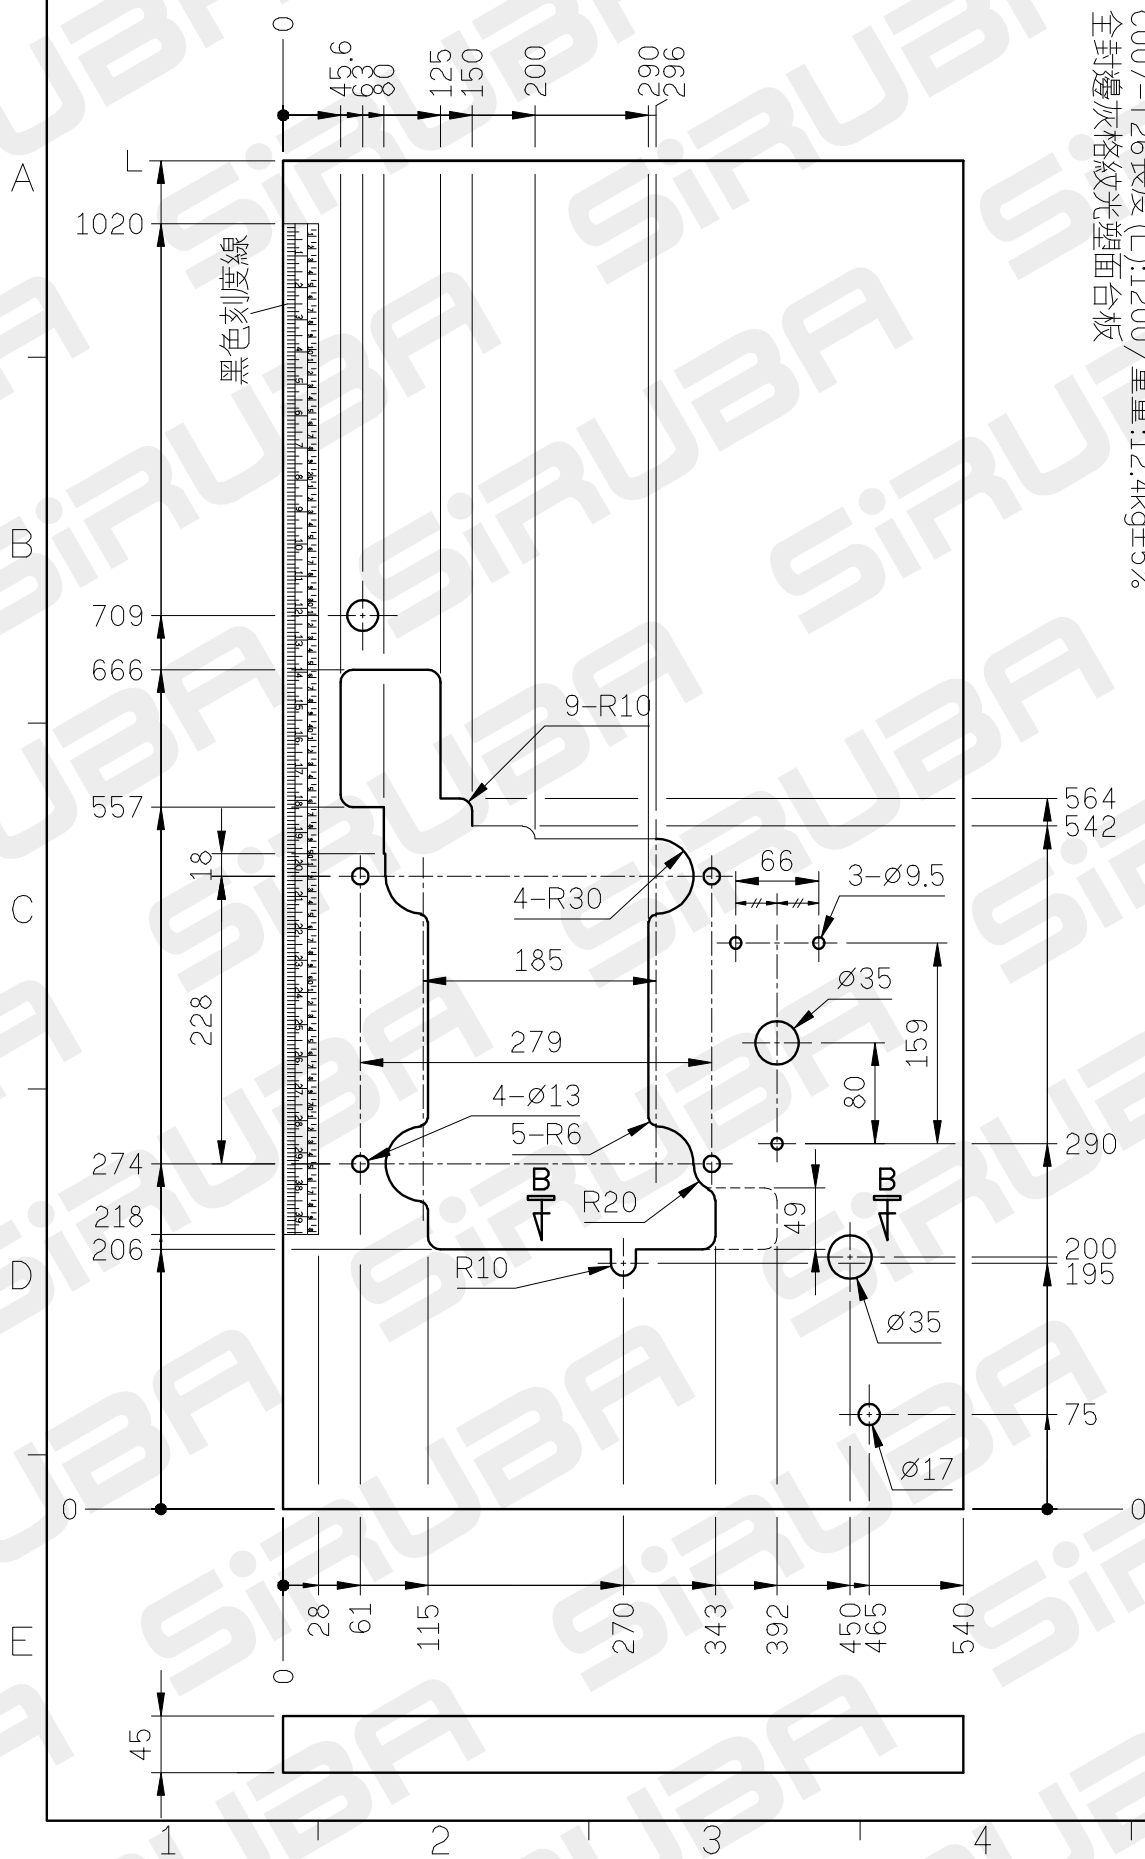


TABLE CUT-OUT OF C007-T30

三針筒車上乘桌板圖

C007 J SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR 印度客戶使用

所有尺寸公差/DIFFERENCE:±2

C007-T30-1070長度(L):1070/重量:11.3kg±5%

C007-T30長度(L):1200/重量:12.3kg±5%

全封邊灰格紋光塑面台板

